


ALL NEW SHOCKS FOR OPTIMIZED PERFORMANCE

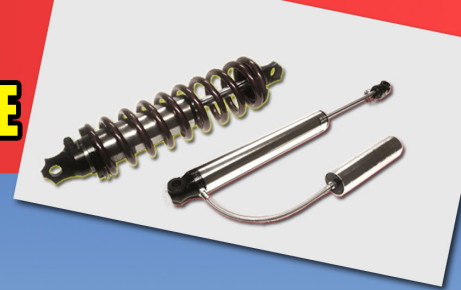

FULL THROTTLE **SUSPENSION** INC.



- **2011 LEVELING KITS**
- **BILLET ACCESSORIES**
- **REPLACEMENT PARTS**
- **NEW 2.0, 2.5, 3.0, 4.0 SHOCKS**

**2011 HD CHEVY / GMC
15" LIFT KIT**



**2011 GM HD FACTORY
REPLACEMENT SHOCK**



LEVELING KITS

2011 CHEVY/GMC 2500/3500 HD

Chevy/GMC Silverado/Sierra 1500/2500HD/3500HD, 2011-UP, 2WD & 4WD - 8 LUG - 2.25" #38316

2000-2010 CHEVY/GMC TRUCK 2WD/4WD 2500HD/3500HD

Chevy/GMC Silverado/Sierra 1500/2500HD, 2000-2010, 2WD & 4WD - 8 LUG - 2.5" #38305

Chevy/GMC Silverado/Sierra 3500 DUALLY, 2000-2010, 2WD & 4WD - 8-LUG - 2.5" #38305

Chevy Suburban 2500, 2000-2010, 2WD & 4WD - 8 LUG - 2.5" #38305

Chevy Avalanche 2500, 2002-2006, 2WD & 4WD - 8 LUG - 2.5" #38305

GMC Yukon XL: 2000-2010, 2500, 2WD & 4WD - 8 LUG - 2.5" #38305

2007-2011 CHEVY/GMC 1500 TRUCK AND SUV

Chevy/GMC Silverado/Sierra 1500, 2007-2011, 2WD & 4WD, 6-LUG - 2.25" #38110

Chevy/GMC Tahoe/Chevy Suburban/Avalanche 1500 07-11, 2WD/4WD - F-2.25" / R-1.5" #38120

2002-2011 GM SUV

Cadillac Escalade, 2002-2006 2WD & 4WD - 6 LUG - 2.5" #38302

Cadillac Escalade, 2002-2006, 2WD & 4WD - 6 LUG - F-2.5" / R-1.0" #38211

Cadillac Escalade, 2007-2011, 2WD & 4WD - 6 LUG - Adj. - F-1.0 " / R-1.5 " #38213

Chevy/GMC Tahoe/Suburban/Avalanche/Yukon 1500 02-06, 2WD/4WD - F-2.5 " / R-1.5" #38211

1999-2006 CHEVY/GMC TRUCK 4WD 1500

Chevy Silverado/Sierra 1500, 1999-2007 Classic, 4WD - 6 LUG - 2.5" #38302

2000-2007 CHEVY / GMC SUV FRONT ONLY

Chevy Suburban/Chevy Tahoe 1500,2000-2006 Classic,2WD & 4WD-6 LUG-2.5" #38302

GMC Yukon/Yukon XL/Denali: 2002-2007, Classic 2WD/4WD/AWD - 6 LUG - 2.5" #38302

Chevy Avalanche 1500, 2002-2006, 2WD & 4WD - 6 LUG - 2.5" #38302

2003-2010 Hummer H2 Leveling Kits

Hummer H2, ALL, 2003-2010, 4WD 8 LUG - 2.5" #38305

Hummer H2, ALL, 2003-2010, 4WD 8 LUG - F-2.5" / R-1.5" #38306

1988-1998 CHEVY/GMC 1500 4WD TRUCK

Chevy CK 1500, 1988-1998, 4WD - 6-LUG - 1.5" #38302

FORD

2009-2011 Ford F150, 2WD Only - 3" #38602

2004-2008 Ford F150, 2WD & 4WD - 3" #38602

2009-2011 Ford F150, 2WD Only - 2.5" #38604

2004-2008 Ford F150, 2WD & 4WD - 2.5" #38604

2004-2011 Ford F150, 2WD & 4WD - 2" #38606

2010-2011 Ford F150 Raptor SVT, 4WD, 2.0" #38608

1997-2004 Ford F150 HERITAGE EXPEDITION 2WD #38612

1997-2004 Ford F150 HERITAGE EXPEDITION 4WD #38612

1997-2000 Ford F250 LIGHT DUTY, 4WD ONLY - 2.5" #38612

2005-UP Ford F250 SUPER DUTY, 4WD ONLY - 1.5" #38614

2005-2010 Ford F250/350 SUPER DUTY, 4WD ONLY - 2.5" #38616

Toyota Tundra

2007-2011 Toyota Tundra ALL - 2.4" #38400

2007-UP 2WD/4WD - 3.0" #38401

2007-2011 Toyota Tundra Lift Kit, 2WD & 4WD Non-TRD-F-3.0"/R-1.0" #38402

2007-2011 Toyota Tundra Lift Kit, 2WD & 4WD TRD OK F-3.0"/R-2.0" #38403




#38305



#38506



#38120

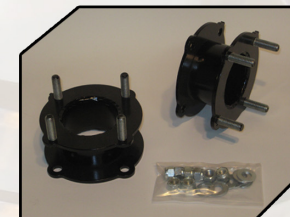

#38400

DODGE 2500/3500 4WD

1994-2011 Dodge Ram 2500/3500, 4WD Only - 8 LUG - 2.0" #38505

2006-2011 Dodge Ram MEGA CAB, 4WD Only - 8 LUG - 2.0" #38505

1994-2011 Dodge Ram 2500/3500, 4WD Only - 8 LUG - 3.0" #38506

2006-2011 Dodge Ram MEGA CAB, 4WD Only - 8 LUG - 3.0" #38506

DODGE 1500

2011-UP Dodge Ram 1500, 4WD Only - 2.5" #38508

2006-2008 Dodge Ram 1500, 4WD Only - 2.5" #38510

2002-2005 Dodge Ram 1500, 4WD Only - 2.0" #38511

1994-2001 Dodge Ram 1500, 4WD Only - 2.0" #38505

Toyota FJ Cruiser & 4Runner

2003-2009 - F-3.0" / R-2.0" #38406

Toyota Tacoma

2005-UP, 2WD/4WD, 6-Lug - 3.0" #38408

2005-UP, 2WD/4WD, 6-Lug - 2.25" #38409

4" 2007-2011 CHEVY/GMC HD LEVELING KIT

2011 HD CHEVY/GMC LEVELING KIT TRUCK

4WD Chevy/GMC Silverado/Sierra 2500/3500 F-4.0" / R-.75" #38136
 2WD Chevy/GMC Silverado/Sierra 2500/3500 F-4.0" / R-.75" #38138



FRONT SHOCK UPGRADES

FTS 2.0 6.5" Travel Remote Reservoir Shocks

Brushed Finish W/ Billet Shock Clamp #B2065-625RUJ
 Chrome Finish W/ Billet Shock Clamp #C2065-625RUJ

2007-2011 CHEVY/GMC LEVELING KIT TRUCK

4WD Chevy/GMC Silverado/Sierra 1500 2007-2011 F-4.0" / R-1.75" #38114
 2WD Chevy/GMC Silverado/Sierra 1500 2007-2011 F-4.0" / R-1.75" #38102



REAR SHOCK UPGRADES

FTS 2.0 6.5" Travel Remote Reservoir Shocks

Brushed Finish W/ Billet Shock Clamp #B2011-625R-K2
 Chrome Finish W/ Billet Shock Clamp #C2011-625R-K2

2007-2011 CHEVY/GMC 4" TAHOE, SUBURBAN, AVALANCHE, YUKON LEVELING KIT SUV

4WD Chevy/GMC Tahoe/Chevy Suburban, Avalanche 1500 Lift Kit, 2007 - 2011, 6-Lug- 4.0 "F/3.0" R #38124
 2WD Chevy/GMC Tahoe/Chevy Suburban, Avalanche 1500 Lift Kit, 2007 - 2011, 6-Lug- 4.0 "F/3.0" R #38122



REAR SHOCK UPGRADE (FOR NON AUTO RIDE)

FTS 2.0 11" Travel Remote Reservoir Shocks

Brushed Finish W/ Billet Shock Clamp #B2011-625R-K2
 Chrome Finish W/ Billet Shock Clamp #C2011-625R-K2

REAR SHOCK UPGRADE

FTS 2.0 11" Travel Remote Reservoir Shocks

Chrome Finish W/ Billet Shock Clamp #B2011-625R-K2
 Brushed Finish W/ Billet Shock Clamp #C2011-625R-K2



#38114



#38102



7" 2007-2011 CHEVY / GMC 1500 TRUCK

2007-2011 CHEVY 2WD

2007-2011 7" CHEVY / GMC 1500 2WD BASIC KIT

COMPONENT BOX 1
LEFT KNUCKLE / RIGHT KNUCKLE
6.25 REAR BLOCK AND U BOLTS

2007-2011 7" CHEVY / GMC 1500 2WD W/ COIL OVERS

COMPONENT BOX 1
LEFT KNUCKLE / RIGHT KNUCKLE
FTS 2.5 EMULSION COIL OVER (PAIR)
6.25 REAR BLOCK AND U BOLTS



#84901
#C8500-1-2
#C8500-2
#C8500-3A
#84911
#C8500-5-2
#C8500-2
#C8500-7
#C8500-3A



2007-2011 CHEVY 4WD

2007-2011 7" CHEVY / GMC 1500 4WD BASIC KIT

COMPONENT BOX 1
LEFT KNUCKLE / RIGHT KNUCKLE
6.25 REAR BLOCK AND U BOLTS

2007-2011 7" CHEVY / GMC 1500 4WD W/ COIL OVERS

COMPONENT BOX 1
LEFT KNUCKLE / RIGHT KNUCKLE
FTS 2.5 EMULSION COIL OVER (PAIR)
6.25 REAR BLOCK AND U BOLTS

#84902
#C8500-1-4
#C8500-2
#C8500-3A
#84912
#C8500-6-4
#C8500-2
#C8500-7
#C8500-3A



UPGRADE FRONT COIL OVER

FTS 2.5 EMULSION COIL OVER (PAIR)

DOUBLE FRONT SHOCK UPGRADE

DOUBLE SHOCK HOOPS W/ UPPER A ARM
DOUBLE SHOCK HOOPS W/ A ARM BRACKET
CHROME FTS 6.5" TRAVEL R/R
BRUSHED FTS 6.5" TRAVEL R/R

SINGLE REAR SHOCK UPGRADE

CHROME FTS 2.0 R/R 12" TRAVEL
BRUSHED FTS 2.0 R/R 12" TRAVEL


DOUBLE REAR SHOCK UPGRADE

DOUBLE REAR SHOCK BRACKET KIT (W/WELD ON AXLE BRACKETS)
BRUSHED FTS 2.0 R/R 8.5" TRAVEL
CHROME FTS 2.0 R/R 8.5" TRAVEL

BILLET SHOCK CLAMPS

CHROME 2.0 BILLET SHOCK CLAMP
BLACK ANODIZED 2.0 BILLET SHOCK CLAMP

#C8500-7
#84941
#84940
#C2065-625R
#B2065-625R
#C2012-625R
#B2012-625R
#84946
#C2085-625R
#B2085-625R
#C2020
#B2020

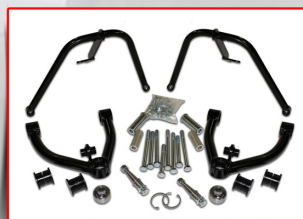

ACCESSORIES

STEEL BRAIDED BRAKE LINE KIT (SINGLE REAR LINE) #84926
STEEL BRAIDED BRAKE LINE KIT (DUAL REAR LINE) #84927
HEAVY DUTY HEIMS JOINT STEERING KIT #85943
DOUBLE STEERING STABILIZER KIT #85946
36" TRACTION BAR KIT (STANDARD CAB SHORT BED) #84936
38" TRACTION BAR KIT (EXTRA CAB /CREW CAB SHORT BED) #84938
DOUBLE SHOCK HOOPS W/ A ARM BRACKET #84940
DOUBLE REAR SHOCK BRACKET KIT (W/WELD ON AXLE BRACKET) #85049
REAR AIR BAG KIT (USE W/ STOCK SPRINGS) #85050
REAR AIR BAG KIT (USE W/ FTS 7" SPRINGS) #85051
UNI BALL UPPER A ARMS #84944



7" 2007-2011 CHEVY / GMC TAHOE, SUBURBAN, AVALANCHE, YUKON, ESCALADE, DENALI

2007-2011 CADILLAC ESCALADE, GMC DENALI 2WD

2007-2011 7" ESCALADE, DENALI 2WD BASIC KIT	#84908
COMPONENT BOX 1	#C8500-8-2
LEFT KNUCKLE / RIGHT KNUCKLE	#C8500-2
6.25" REAR SUV KIT	#C8500-3B

2007-2011 CADILLAC ESCALADE, GMC DENALI 4WD

2007-2011 7" ESCALADE, DENALI 4WD BASIC KIT	#84909
COMPONENT BOX 1	#C8500-8-4
LEFT KNUCKLE / RIGHT KNUCKLE	#C8500-2
6.25" REAR SUV KIT	#C8500-3B

2007-2011 TAHOE, SUBURBAN, AVALANCHE 2WD

2007-2011 7" TAHOE, SUBURBAN, AVALANCHE 2WD BASIC KIT	#84903
COMPONENT BOX 1	#C8500-1-2
LEFT KNUCKLE / RIGHT KNUCKLE	#C8500-2
6.25 REAR SUV KIT (NON AUTO RIDE)	#C8500-3B

2007-2011 7" CHEVY / GMC SUV 2WD W/ COIL OVERS	#84905
MAIN BOX KIT 2WD W/ HARDWARE	#C8500-5-2
LEFT KNUCKLE / RIGHT KNUCKLE	#C8500-2
FTS 2.5 EMULSION COIL OVER (PAIR)	#C8500-7
6.25" REAR SUV KIT (NON AUTO RIDE)	#C8500-3B

UPGRADE FRONT COILOVER

FTS 2.5 EMULSION COIL OVER (PAIR)	#C8500-7
-----------------------------------	----------

DOUBLE FRONT SHOCK UPGRADE

DOUBLE SHOCK HOOPS W/ UPPER A ARM	#84941
DOUBLE SHOCK HOOPS W/ A ARM BRACKET	#84940
CHROME FTS 2.0 R/R 6.5" TRAVEL	#C2065-625R
BRUSHED FTS 2.0 R/R 6.5" TRAVEL	#B2065-625R

SINGLE REAR SHOCK UPGRADE

CHROME FTS 2.0 R/R 12" TRAVEL	#C2012-625R
BRUSHED FTS 2.0 R/R 12" TRAVEL	#B2012-625R

BILLET SHOCK CLAMPS

CHROME 2.0 BILLET SHOCK CLAMP	#C2020
BLACK ANODIZED 2.0 BILLET SHOCK CLAMP	#B2020

2007-2011 TAHOE, SUBURBAN, AVALANCHE 4WD

2007-2011 7" TAHOE, SUBURBAN, AVALANCHE 4WD BASIC KIT	#84904
COMPONENT BOX 1	#C8500-1-4
LEFT KNUCKLE / RIGHT KNUCKLE	#C8500-2
6.25" REAR SUV KIT (NON AUTO RIDE)	#C8500-3B

2007-2011 7" CHEVY / GMC SUV 4WD W/ COIL OVERS

2007-2011 7" CHEVY / GMC SUV 4WD W/ COIL OVERS	#84906
COMPONENT BOX 1	#C8500-6-4
LEFT KNUCKLE / RIGHT KNUCKLE	#C8500-2
FTS 2.5 EMULSION COIL OVER (PAIR)	#C8500-7
6.25" REAR SUV KIT (NON AUTO RIDE)	#C8500-3B



FTS 2.5 2007+ GM COIL OVER REPLACEMENT FOR 7" KIT



#C8500-7



ACCESSORIES

STEEL BRAIDED BRAKE LINE KIT (SINGLE REAR LINE)	#84926
STEEL BRAIDED BRAKE LINE KIT (DUAL REAR LINE)	#84927
HEAVY DUTY HEIMS JOINT STEERING KIT	#85943
DOUBLE STEERING STABILIZER KIT	#85946
UNIBALL JOINT UPPER A ARMS	#84944
DOUBLE SHOCK HOOPS W/ UPPER A ARM BRACKETS	#84940
REAR TUBULAR LOWER TRAILING ARMS	#85060
REAR TUBULAR TRACK BAR	#85061



10" 2007 - 2011 CHEVY / GMC 1500 TRUCK

2WD 2007-2008 1500 TRUCK

(LT MODELS ONLY)

2007-2008 10" CHEVY / GMC 1500 2WD BASIC KIT	#84801
COMPONENT BOX 1	#C8400-1
COMPONENT BOX 2	#C8400-2
10" REAR SPRINGS (PAIR)	#85445
STEEL BRAIDED BRAKE LINE (SINGLE REAR LINE)	#84826

(LT MODELS ONLY)

2007-2008 10" CHEVY / GMC 1500 2WD W/ COIL OVERS	#84811
COMPONENT BOX 1	#C8400-1
COMPONENT BOX 2	#C8400-3
10" REAR SPRINGS (PAIR)	#85445
FTS 2.5 EMULSION COIL OVER (PAIR)	#C8400-7
STEEL BRAIDED BRAKE LINE (SINGLE REAR LINE)	#84826

2WD 2008-2011 1500 TRUCK

(LTZ MODELS ONLY)

2008-2011 10" CHEVY / GMC 1500 2WD BASIC KIT	#84810
COMPONENT BOX 1	#C8400-1
COMPONENT BOX 2	#C8400-2
10" REAR SPRINGS (PAIR)	#85445
2WD/ 4WD STEEL BRAIDED BRAKE LINE (DUAL REAR LINE)	#84827

(LTZ MODELS ONLY)

2008-2011 10" CHEVY / GMC 1500 2WD W/ COIL OVERS	#84813
COMPONENT BOX 1	#C8400-1
COMPONENT BOX 2	#C8400-3
10" REAR SPRINGS (PAIR)	#85445
FTS 2.5 EMULSION COIL OVER (PAIR)	#C8400-7
2WD/ 4WD STEEL BRAIDED BRAKE LINE (DUAL REAR LINE)	#84827

FRONT COIL OVER UPGRADE

FTS 2.5 EMULSION COIL OVERS (PAIR)	#C8400-7
------------------------------------	----------

DOUBLE FRONT SHOCK UPGRADE

DOUBLE SHOCK HOOPS W/ UPPER A ARM	#84840
DOUBLE SHOCK HOOPS W/ A ARM BRACKET	#84841
UNI BALL UPPER A ARMS	#84842
CHROME FTS 2.0 R/R 10" TRAVEL	#C2010-625R
BRUSHED FTS 2.0 R/R 10" TRAVEL	#B2010-625R

ACCESSORIES

DOUBLE SHOCK HOOPS W/ UPPER A ARMS	#84840
DOUBLE FRONT SHOCK HOOPS W/ A ARM BRACKET	#84841
UNI BALL UPPER A ARMS	#84842
DOUBLE REAR SHOCK BRACKET W/ WELD ON AXLE BRACKETS	#84946
HEAVY DUTY HEIMS JOINT STEERING KIT	#85443
DOUBLE STEERING STABILIZER KIT	#85446
2WD/ 4WD STEEL BRAIDED BRAKE LINE (SINGLE REAR LINE)	#84826
2WD/ 4WD STEEL BRAIDED BRAKE LINE (DUAL REAR LINE)	#84827
TRACTION BAR KIT 48" (STANDARD CAB SHORT BED)	#84848
TRACTION BAR KIT 50" (EXTRA CAB, CREW CAB SHORT BED)	#84850
TRACTION BAR KIT 60" (EXTRA CAB LONG BED)	#84860
REAR AIR BAG KIT (USE ONLY W/ 10" SPRING)	#85250
2" REAR DRIVE LINE SPACER	#85472
CV FRONT DRIVE LINE	#85475

4WD 2007-2008 1500 TRUCK

(LT MODELS ONLY)

2007-2008 10" CHEVY / GMC 1500 4WD BASIC KIT	#84802
COMPONENT BOX 1	#C8400-1
COMPONENT BOX 2	#C8400-4
10" REAR SPRINGS (PAIR)	#85445
CV FRONT DRIVE LINE	#85475
STEEL BRAIDED BRAKE LINE (SINGLE REAR LINE)	#84826

(LT MODELS ONLY)

2007-2008 10" CHEVY / GMC 1500 4WD W/ COIL OVERS	#84812
COMPONENT BOX 1	#C8400-1
COMPONENT BOX 2	#C8400-5
10" REAR SPRINGS (PAIR)	#85445
FTS 2.5 EMULSION COIL OVER (PAIR)	#C8400-7
CV FRONT DRIVE LINE	#85475
STEEL BRAIDED BRAKE LINE (SINGLE REAR LINE)	#84826

4WD 2008-2011 1500 TRUCK

(LTZ MODELS ONLY)

2008-2011 10" CHEVY / GMC 1500 4WD BASIC KIT	#84820
COMPONENT BOX 1	#C8400-1
COMPONENT BOX 2	#C8400-4
10" REAR SPRINGS (PAIR)	#85445
CV FRONT DRIVE LINE	#85475
2WD/ 4WD STEEL BRAIDED BRAKE LINE (DUAL REAR LINE)	#84827

(LTZ MODELS ONLY)

2008-2011 10" CHEVY / GMC 1500 4WD W/ COIL OVERS	#84814
COMPONENT BOX 1	#C8400-1
COMPONENT BOX 2	#C8400-5
10" REAR SPRINGS (PAIR)	#85445
FTS 2.5 EMULSION COIL OVER (PAIR)	#C8400-7
CV FRONT DRIVE LINE	#85475
2WD/ 4WD STEEL BRAIDED BRAKE LINE (DUAL REAR LINE)	#84827



SINGLE REAR SHOCK UPGRADE

CHROME FTS 14" TRAVEL R/R	#C2014-625R
BRUSHED FTS 14" TRAVEL R/R	#B2014-625R

DOUBLE REAR SHOCK UPGRADE

CHROME FTS 10" TRAVEL R/R	#C2010-625R
BRUSHED FTS 10" TRAVEL R/R	#B2010-625R
DOUBLE REAR SHOCK BRACKET KIT	#84049



10" 2007-2011 CHEVY/GMC TAHOE, SUBURBAN, AVALANCHE, YUKON, ESCALADE, DENALI

2WD 2007-2011 TAHOE, SUBURBAN, AVALANCHE CADILLAC ESCALADE, GMC DENALI

2007-2011 10" CHEVY/GMC SUV 2WD BASIC KIT W/ AUTO RIDE

COMPONENT BOX 1	#84803
COMPONENT BOX 2	#C8400-1
REAR KIT	#C8400-2
AIR RIDE KIT	#C8400-8

2007-2011 10" CHEVY/GMC SUV 2WD BASIC KIT W/O AUTO RIDE

COMPONENT BOX 1	#84804
COMPONENT BOX 2	#C8400-1
REAR KIT	#C8400-2

2007-2011 10" CHEVY/GMC 2WD W/ COIL OVERS W/O AUTO RIDE

COMPONENT BOX 1	#84807
COMPONENT BOX 2	#C8400-1
REAR KIT	#C8400-3
FTS 2.5 EMULSION COIL OVER (PAIR)	#C8400-8

4WD 2007-2011 TAHOE, SUBURBAN, AVALANCHE CADILLAC ESCALADE, GMC DENALI

2007-2011 10" CHEVY/GMC SUV 4WD BASIC KIT W/ AUTO RIDE

COMPONENT BOX 1	#84805
COMPONENT BOX 2	#C8400-1
REAR KIT	#C8400-4
AIR RIDE KIT	#C8400-8
CV FRONT DRIVE LINE	#C8400-9

2007-2011 10" CHEVY/GMC SUV 4WD BASIC KIT W/O AUTO RIDE

COMPONENT BOX 1	#84806
COMPONENT BOX 2	#C8400-1
REAR KIT	#C8400-4
CV FRONT DRIVE LINE	#C8400-8

2007-2011 10" CHEVY/GMC SUV 4WD W/ COIL OVERS

COMPONENT BOX 1	#85475
COMPONENT BOX 2	#84808
REAR KIT	#C8400-1
FTS 2.5 EMULSION COIL OVER (PAIR)	#C8400-5
CV FRONT DRIVE LINE	#C8400-8



FRONT COIL OVER UPGRADE

FTS 2.5 EMULSION COIL OVERS (PAIR) #C8400-7

DOUBLE FRONT SHOCK UPGRADE

DOUBLE SHOCK HOOPS W/ UPPER A ARM #84840

DOUBLE SHOCK HOOPS W/ A ARM BRACKET #84841

UPPER A ARM #84842

CHROME FTS 2.0 R/R 10" TRAVEL #C2010-625R

BRUSHED FTS 2.0 R/R 10" TRAVEL #B2010-625R

SINGLE REAR SHOCK UPGRADE

CHROME FTS 2.0 R/R 14" TRAVEL #C2012-625R

BRUSHED FTS 2.0 R/R 14" TRAVEL #B2012-625R



ACCESSORIES

DOUBLE SHOCK HOOPS W/ UPPER A ARMS	#84840
DOUBLE FRONT SHOCK HOOPS W/ A ARM BRACKET	#84841
UPPER A ARMS	#84842
DOUBLE REAR SHOCK BRACKET W/ WELD ON AXLE BRACKETS	#84946
HEIMS JOINT STEERING KIT	#85443
DOUBLE STEERING STABILIZER KIT	#85446
2WD/ 4WD STEEL BRAIDED BRAKE LINE (SINGLE REAR LINE)	#84826
2WD/ 4WD STEEL BRAIDED BRAKE LINE (DUAL REAR LINE)	#84827
REAR TUBULAR LOWER TRAILING ARMS	#85060
REAR TUBULAR TRACK BAR	#85061
REAR AIR BAG KIT (USE ONLY W/ 10" SPRING)	#85250
2" REAR DRIVE LINE SPACER	#85472
CV FRONT DRIVE LINE	#85475

15" 2007 - 2011 CHEVY / GMC 1500 TRUCK

2WD 2007-2011 1500 TRUCK

2007-2011 15" CHEVY / GMC 1500 2WD BASIC KIT

- COMPONENT BOX 1
- COMPONENT BOX 2
- COMPONENT BOX 3
- 12" REAR SPRINGS (PAIR)
- 4" REAR BLOCK KIT

- #84701
- #C8470-1
- #C8470-2
- #C8470-12
- #85445
- #C8470-10

2007-2011 15" CHEVY / GMC 1500 2WD W/ COIL OVERS

- COMPONENT BOX 1
- COMPONENT BOX 2
- COMPONENT BOX 3
- 12" REAR SPRINGS (PAIR)
- 4" REAR BLOCK KIT
- FTS 2.5 EMULSION COIL OVER (PAIR)

- #84711
- #C8470-1
- #C8470-3
- #C8470-13
- #85445
- #C8470-10
- #C8470-7



4WD 2007-2011 1500 TRUCK

2007-2011 15" CHEVY / GMC 1500 4WD BASIC KIT

- COMPONENT BOX 1
- COMPONENT BOX 2
- COMPONENT BOX 3
- 12" REAR SPRINGS (PAIR)
- 4" REAR BLOCK KIT
- CV FRONT DRIVE LINE

- #84702
- #C8470-1
- #C8470-4
- #C8470-14
- #85445
- #C8470-10
- #85475

2007-2011 15" CHEVY / GMC 1500 4WD W/ COIL OVERS

- COMPONENT BOX 1
- COMPONENT BOX 2
- COMPONENT BOX 3
- 12" REAR SPRINGS (PAIR)
- 4" REAR BLOCK KIT
- FTS 2.5 EMULSION COIL OVER (PAIR)
- CV FRONT DRIVE LINE

- #84712
- #C8470-1
- #C8470-5
- #C8470-15
- #85445
- #C8470-10
- #C8470-7
- #85475



FRONT COIL OVER UPGRADE

FTS 2.5 EMULSION COIL OVERS (PAIR)

#C8470-7

DOUBLE FRONT SHOCK UPGRADE

- DOUBLE SHOCK HOOPS W/ UPPER A ARM
- DOUBLE SHOCK HOOPS W/ A ARM BRACKET
- UNI BALL UPPER A ARM
- CHROME FTS 2.0 R/R 11" TRAVEL
- BRUSHED FTS 2.0 R/R 11" TRAVEL

- #84740
- #84741
- #84742
- #C2011-625R
- #B2011-625R



SINGLE REAR SHOCK UPGRADE

- CHROME FTS 16" TRAVEL R/R
- BRUSHED FTS 16" TRAVEL R/R

- #C2016-875R
- #B2016-875R

DOUBLE REAR SHOCK UPGRADE

- CHROME FTS 11" TRAVEL R/R
- BRUSHED FTS 11" TRAVEL R/R
- DOUBLE REAR SHOCK BRACKET KIT

- #C2011-625R
- #B2011-625R
- #84049



ACCESSORIES

- DOUBLE STEERING STABILIZER KIT #85446
- HEAVY DUTY HEIMS JOINT STEERING KIT #85443
- 2WD/ 4WD STEEL BRAIDED BRAKE LINE (SINGLE REAR LINE) #84826
- 2WD/ 4WD STEEL BRAIDED BRAKE LINE (DUAL REAR LINE) #85927
- TRACTION BAR KIT 60" (EXTRA CAB /CREW CAB SHORT BED) #85047
- TRACTION BAR KIT 65" (EXTRA CAB LONG) #85247
- DOUBLE REAR SHOCK BRACKET KIT (W/ WELD ON AXLE BRACKET) #84049
- REAR AIR BAG KIT (USE ONLY W/ FTS 10" SPRING) #85250



15" 2007 - 2011 CHEVY / GMC - TAHOE, SUBURBAN, AVALANCHE, YUKON, ESCALADE, DENALI

2WD 2007-2011 TAHOE, SUBURBAN, AVALANCHE CADILLAC ESCALADE, GMC DENALI

2007-2011 15" CHEVY / GMC SUV 2WD BASIC KIT W/ AUTO RIDE

- COMPONENT BOX 1
- COMPONENT BOX 2
- COMPONENT BOX 3
- REAR KIT
- AIR RIDE KIT

#84703

- #C8470-1
- #C8700-2
- #C8470-12
- #C8700-8
- #C8470-9

FRONT COIL OVER UPGRADE

FTS 2.5 EMULSION COIL OVERS (PAIR) #C8470-7

DOUBLE FRONT SHOCK UPGRADE

DOUBLE SHOCK HOOPS W/ UPPER A ARM #84840

DOUBLE SHOCK HOOPS W/ A ARM BRACKET #84841

UPPER A ARM #84842

CHROME FTS 2.0 R/R 11" TRAVEL #C2011-625R

BRUSHED FTS 2.0 R/R 11" TRAVEL #B2011-625R

2007-2011 15" CHEVY / GMC SUV 2WD BASIC KIT W/O AUTO RIDE

- COMPONENT BOX 1
- COMPONENT BOX 2
- COMPONENT BOX 3
- REAR KIT

#84704

- #C8470-1
- #C8470-2
- #C8470-12
- #C8470-8

SINGLE REAR SHOCK UPGRADE

CHROME FTS 2.0 R/R 16" TRAVEL #C2016-875R

BRUSHED FTS 2.0 R/R 16" TRAVEL #B2016-875R

2007-2011 15" CHEVY / GMC 2WD W/ COIL OVERS W/O AUTO RIDE

- COMPONENT BOX 1
- COMPONENT BOX 2
- COMPONENT BOX 3
- REAR KIT
- FTS 2.5 EMULSION COIL OVER (PAIR)

#84707

- #C8470-1
- #C8470-3
- #C8470-13
- #C8470-8
- #C8470-7

DOUBLE REAR SHOCK UPGRADE

CHROME FTS 12" TRAVEL R/R #C2012-625R

BRUSHED FTS 12" TRAVEL R/R #B2012-625R

DOUBLE REAR SHOCK BRACKET KIT #84049

4WD 2007-2011 TAHOE, SUBURBAN, AVALANCHE CADILLAC ESCALADE, GMC DENALI

2007-2011 15" CHEVY / GMC SUV 4WD BASIC KIT W/ AUTO RIDE

- COMPONENT BOX 1
- COMPONENT BOX 2
- COMPONENT BOX 3
- REAR KIT
- AIR RIDE KIT
- CV FRONT DRIVE LINE

#84705

- #C8470-1
- #C8470-4
- #C8470-14
- #C8470-8
- #C8470-9
- #85475



2007-2011 15" CHEVY / GMC SUV 4WD BASIC KIT W/O AUTO RIDE

- COMPONENT BOX 1
- COMPONENT BOX 2
- COMPONENT BOX 3
- REAR KIT
- CV FRONT DRIVE LINE

#84706

- #C8470-1
- #C8470-4
- #C8470-14
- #C8470-8
- #85475



2007-2011 15" CHEVY / GMC SUV 4WD W/ COIL OVERS

- COMPONENT BOX 1
- COMPONENT BOX 2
- COMPONENT BOX 3
- REAR KIT
- FTS 2.5 EMULSION COIL OVER (PAIR)
- CV FRONT DRIVE LINE

#84708

- #C8470-1
- #C8470-5
- #C8470-15
- #C8470-8
- #C8470-7
- #85475



ACCESSORIES

STEEL BRAIDED BRAKE LINE KIT (SINGLE REAR LINE) #84726

STEEL BRAIDED BRAKE LINE KIT (DUAL REAR LINE) #84727

HEAVY DUTY HEIMS JOINT STEERING KIT #85443

DOUBLE STEERING STABILIZER KIT #85446



7" 2000-2010 CHEVY / GMC HD TRUCK

- 100 % Bolt On
- The ONLY GM spindle system on the market that DOES NOT extend the track width.
- Structural crossmember are constructed of 1/4 " thick steel
- Offset ductile iron steering knuckles that DOES NOT extend track width while maintaining stock alignment specifications this makes for great drivability on and off road
- Front differential is dropped a full 7" to maintain proper cv axle angles
- Lifetime Warranty against manufacturer's defects
- Heavy duty Semi Gloss black powder-coat for a great look that's long lasting
- No exhaust modifications required (On Duramax Models)
- Impact struts to distribute front suspension impact loads through frame
- No cutting on front differential or factory bumper stops
- No rear add A leaves makes for easy installation and maintain factory ride quality
- Utilizes the factory front bumper stops for superior ride quality



2000-2010 2WD 7" KIT TRUCK 1500/2500/3500 NON DUALLY (W/ REAR BLOCK)

MAIN BOX KIT W/ HARDWARE

5" BLOCKS AND U BOLTS

LEFT AND RIGHT STEERING KNUCKLES

2000-2010 2WD 7" KIT TRUCK 1500/2500/3500 NON DUALLY (W/ 7" REAR SPRING)

MAIN BOX KIT W/ HARDWARE

7" REAR LEAF SPRING (PAIR)

LEFT AND RIGHT STEERING KNUCKLES

#85101

#C8510-2

#C8510-5

#C8510-8

#85111

#C8510-2

#C85045

#C8510-8



2000-2010 4WD 7" KIT TRUCK 1500/2500/3500 NON DUALLY (W/ REAR BLOCK)

MAIN BOX KIT W/ HARDWARE

5" BLOCKS AND U BOLTS

LEFT AND RIGHT STEERING KNUCKLES

2000-2010 4WD 7" KIT TRUCK 1500/2500/3500 NON DUALLY (W/ 7" REAR SPRING)

MAIN BOX KIT W/ HARDWARE

7" REAR LEAF SPRING (PAIR)

LEFT AND RIGHT STEERING KNUCKLES

#85102

#C8510-4

#C8510-6

#C8510-8

#85112

#C8510-4

#C85045

#C8510-8



2000-2010 2WD 7" KIT TRUCK 3500 DUALLY W/ REAR BLOCK #85103

MAIN BOX KIT W/ HARDWARE

4" BLOCKS AND U BOLTS

LEFT AND RIGHT STEERING KNUCKLES

2000-2010 4WD 7" KIT TRUCK 3500 DUALLY W/ REAR BLOCK #85104

MAIN BOX KIT W/ HARDWARE

4" BLOCKS AND U BOLTS

LEFT AND RIGHT STEERING KNUCKLES

#85103

#C8510-2

#C8510-7

#C8510-8

#85104

#C8510-4

#C8510-7

#C8510-8



ACCESSORIES

DOUBLE SHOCK HOOPS

TUBULAR UPPER A ARM (BALL JOINT STYLE)

DOUBLE SHOCK HOOPS W/BALL JOINT UPPER A ARMS

HEAVY DUTY HEIMS JOINT STEERING

DOUBLE STEERING STABILIZER KIT

2WD/ 4WD 2" TORSION KEYS

7" REAR LEAF SPRINGS (NON DUALLY)

TRACTION BARS 60" CREW CAB SHORT BED

REAR AIR BAG KIT (USE WITH STOCK SPRING)

REAR AIR BAG KIT (USE WITH 7" REAR SPRING)

IDLER ARM BRACE HD

DOUBLE REAR SHOCK BRACKETS

#85040

#85041

#85042

#85043

#85046

#50010

#85045

#85048

#85050

#85051

#85251

#85449



BRAKE LINE OPTIONS

2000-2006 2WD/4WD STEEL BRAIDED BRAKE LINE (SINGLE REAR LINE) #85022

2007-2010 2WD/4WD STEEL BRAIDED BRAKE LINE (SINGLE REAR LINE) #85026

2007-2010 2WD/4WD STEEL BRAIDED BRAKE LINE (DUAL REAR LINE) #85027



9.5" 1999 - 2010 CHEVY 1500HD 2500HD 3500HD

2001-2010 CHEVY HD 2WD

2001-2010 CHEVY HD 4WD

2001-2006 9.5" CHEVY / GMC 1500HD/2500/3500 2WD BASIC KIT

	#85201
COMPONET BOX 1	#C8520-1
COMPONET BOX 2	#C8520-2
HARDWARE KIT 2WD	#C8520-6
10" REAR SPRINGS	#85245
STEEL BRAIDED BRAKE LINE (SINGLE REAR LINE)	#85222

(LT MODELS ONLY)

2007-2010 9.5" CHEVY / GMC 1500HD/2500/3500 2WD BASIC KIT

	#85205
COMPONET BOX 1	#C8520-1
COMPONET BOX 2	#C8520-2
HARDWARE KIT 2WD	#C8520-6
10" REAR SPRINGS	#85245
STEEL BRAIDED BRAKE LINE (SINGLE REAR LINE)	#85226

(LTZ MODELS ONLY)

2007-2010 9.5" CHEVY / GMC 1500HD/2500/3500 2WD BASIC KIT

	#85207
COMPONET BOX 1	#C8520-1
COMPONET BOX 2	#C8520-2
HARDWARE KIT 2WD	#C8520-6
10" REAR SPRINGS	#85245
STEEL BRAIDED BRAKE LINE (DUAL REAR LINE)	#85227

1999-2000 CHEVY NON HD 4WD

1999-2000 9.5" CHEVY / GMC 2500 4WD BASIC KIT	#85209
COMPONET BOX 1	#C8520-1
COMPONET BOX 2	#C8520-9
HARDWARE KIT 4WD	#C8520-7
10" REAR SPRINGS	#85245
STEEL BRAIDED BRAKE LINE (SINGLE REAR LINE)	#85226
CV FRONT DRIVE SHAFT	#85275

ACCESSORIES

STEEL BRAIDED BRAKE LINE KIT (SINGLE REAR LINE)	#85222
2008-2011 STEEL BRAIDED BRAKE LINE KIT (DUAL REAR LINE)	#85227
2007 STEEL BRAIDED BRAKE LINES (SINGLE REAR)	#85226
HEAVY DUTY HEIMS JOINT STEERING KIT	#85243
HEIMS JOINT SWAY BAR ENDLINKS (FRONT)	#85244
DOUBLE STEERING STABILIZER KIT W/ BASIC SHOCKS	#85246
10" REAR SPRINGS	#85245
REAR AIR BAG KIT (USE W/ FTS 10" SPRINGS)	#85250
CV FRONT DRIVE LINE (GAS 6.0)	#85278
CV FRONT DRIVE LINE (DIESEL)	#85276
IDLER ARM BRACE HD	#85451

2001-2006 9.5" CHEVY / GMC 1500HD/2500/3500 4WD BASIC KIT

	#85202
COMPONET BOX 1	#C8520-1
COMPONET BOX 2	#C8520-4
HARDWARE KIT 4WD	#C8520-8
10" REAR SPRINGS	#85245
STEEL BRAIDED BRAKE LINE (SINGLE REAR LINE)	#85222
CV FRONT DRIVE LINE	#85276

(LT MODELS ONLY)

2007-2010 9.5" CHEVY / GMC 1500HD/2500/3500 4WD BASIC KIT

	#85204
COMPONET BOX 1	#C8520-1
COMPONET BOX 2	#C8520-4
HARDWARE KIT 4WD	#C8520-8
10" REAR SPRINGS	#85245
STEEL BRAIDED BRAKE LINE (SINGLE REAR LINE)	#85226
CV FRONT DRIVE LINE	#85276

(LTZ MODELS ONLY)

2007-2010 9.5" CHEVY / GMC 1500HD/2500/3500 4WD BASIC KIT

	#85206
COMPONET BOX 1	#C8520-1
COMPONET BOX 2	#C8520-4
HARDWARE KIT 4WD	#C8520-8
10" REAR SPRINGS	#85245
STEEL BRAIDED BRAKE LINE (DUAL REAR LINE)	#85227
CV FRONT DRIVE LINE	#85276

DOUBLE FRONT SHOCK UPGRADE

DOUBLE SHOCK HOOPS W/ UNI BAL UPPER A ARM	#85238
DOUBLE SHOCK HOOPS W/ BALL JOINT UPPER A ARM	#85239
CHROME FTS 2.0 R/R 10" TRAVEL	#C2010-625R
BRUSHED FTS 2.0 R/R 10" TRAVEL	#B2010-625R

SINGLE FRONT SHOCK UPGRADE

BRUSHED FTS 2.0 R/R STEM 10" TRAVEL	#B2010-625RS
CHROME FTS 2.0 R/R STEM 10" TRAVEL	#C2010-625RS

DOUBLE REAR SHOCK UPGRADE

DOUBLE REAR SHOCK BRACKETS	#85249
CHROME FTS 2.0 R/R 10" TRAVEL	#C2010-625R
BRUSHED FTS 2.0 R/R 10" TRAVEL	#B2010-625R

SINGLE REAR SHOCK UPGRADE

BRUSHED FTS 2.0 R/R 10" TRAVEL	#B2010-625R
CHROME FTS 2.0 R/R 10" TRAVEL	#C2010-625R



12" 1999 - 2010 CHEVY 1500HD 2500HD 3500HD



2001-2010 CHEVY HD 4WD

4WD BASIC KIT

2001-2006 12" CHEVY /GMC 1500HD/2500/3500	#85302
COMPONET BOX 1	#C8530-1
COMPONET BOX 2	#C8530-4
HARDWARE KIT 4WD	#C8530-8
12" REAR SPRINGS	#85345
STEEL BRAIDED BRAKE LINE (SINGLE REAR LINE)	#85222
CV FRONT DRIVE LINE	#85276

(4WD BASIC KIT FOR LT MODELS ONLY)

2007-2010 12" CHEVY /GMC 1500HD/2500/3500	#85304
COMPONET BOX 1	#C8530-1
COMPONET BOX 2	#C8530-4
HARDWARE KIT 4WD	#C8530-8
12" REAR SPRINGS	#85345
STEEL BRAIDED BRAKE LINE (SINGLE REAR LINE)	#85326
CV FRONT DRIVE LINE	#85276

(4WD BASIC KIT FOR LTZ MODELS ONLY)

2007-2010 12" CHEVY /GMC 1500HD/2500/3500	#85306
COMPONET BOX 1	#C8530-1
COMPONET BOX 2	#C8530-4
HARDWARE KIT 4WD	#C8530-8
12" REAR SPRINGS	#85345
REAR STEEL BRAIDED BRAKE LINE (DUAL REAR LINE)	#85327
CV FRONT DRIVE LINE	#85276

SEE PAGE # 10 FOR ACCESSORIES



2001-2010 CHEVY HD 2WD

2WD BASIC KIT

2001-2006 12" CHEVY /GMC 1500HD/2500/3500	#85301
COMPONET BOX 1	#C8530-1
COMPONET BOX 2	#C8530-2
HARDWARE KIT 2WD	#C8530-6
12" REAR SPRINGS	#85345
STEEL BRAIDED BRAKE LINE (SINGLE REAR LINE)	#85222


(2WD BASIC KIT FOR LT MODELS ONLY)

2007-2010 12" CHEVY /GMC 1500HD/2500/3500	#85305
COMPONET BOX 1	#C8530-1
COMPONET BOX 2	#C8530-2
HARDWARE KIT 2WD	#C8530-6
12" REAR SPRINGS	#85345
STEEL BRAIDED BRAKE LINE (SINGLE REAR LINE)	#85326

(2WD BASIC KIT LTZ MODELS ONLY)

2007-2010 12" CHEVY /GMC 1500HD/2500/3500	#85307
COMPONET BOX 1	#C8530-1
COMPONET BOX 2	#C8520-2
HARDWARE KIT 2WD	#C8530-6
12" REAR SPRINGS	#85345
REAR STEEL BRAIDED BRAKE LINE (DUAL REAR LINE)	#85327

1999-2000 CHEVY NON HD 4WD

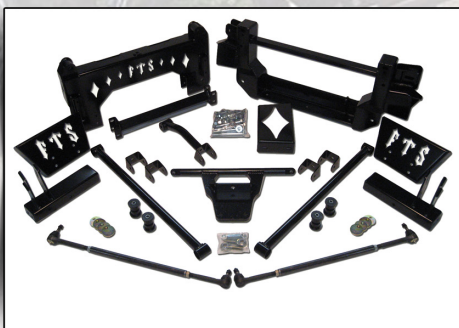

4WD BASIC KIT

1999-2000 12" CHEVY /GMC 2500/3500	#85309
COMPONET BOX 1	#C8530-1
COMPONET BOX 2	#C8530-4
HARDWARE KIT 4WD	#C8530-7
12" REAR SPRINGS	#85345
STEEL BRAIDED BRAKE LINE (SINGLE REAR LINE)	#85222
CV FRONT DRIVE LINE	#85275

16" 1999 - 2010 CHEVY 1500HD 2500HD 3500HD



2001-2010 CHEVY HD 2WD

2WD BASIC KIT

2001-2006 16" CHEVY /GMC 1500HD/2500/3500	#85401
COMPONET BOX 1	#C8540-1
COMPONET BOX 2	#C8540-2
COMPRESSION STRUTS	#C8540-5
HARDWARE KIT 2WD	#C8540-6
12" REAR SPRINGS	#85345
4" REAR BLOCK AND U BOLT KIT	#85333
STEEL BRAIDED BRAKE LINE (SINGLE REAR LINE)	#85422

(2WD BASIC KIT FOR LT MODELS ONLY)

2007-2010 16" CHEVY /GMC 1500HD/2500/3500	#85405
COMPONET BOX 1	#C8540-1
COMPONET BOX 2	#C8540-2
COMPRESSION STRUTS	#C8540-5
HARDWARE KIT 2WD	#C8540-6
12" REAR SPRINGS	#85345
4" REAR BLOCK AND U BOLT KIT	#85333
STEEL BRAIDED BRAKE LINE (SINGLE REAR LINE)	#85426

(2WD BASIC KIT FOR LTZ MODELS ONLY)

2007-2010 16" CHEVY /GMC 1500HD/2500/3500	#85407
COMPONET BOX 1	#C8540-1
COMPONET BOX 2	#C8540-2
COMPRESSION STRUTS	#C8540-5
HARDWARE KIT 2WD	#C8540-6
12" REAR SPRINGS	#85345
4" REAR BLOCK AND U BOLT KIT	#85333
REAR STEEL BRAIDED BRAKE LINE (DUAL REAR LINE)	#85427

ACCESSORIES

12" REAR LEAF SPRINGS	#85245
STEEL BRAIDED BRAKE LINES (SINGLE REAR LINE)	#85022
STEEL BRAIDED BRAKE LINES (SINGLE REAR LINE)	#85026
STEEL BRAIDED BRAKE LINES (DUAL REAR LINE)	#85027
2" REAR DRIVE LINE SPACER (6.0 GAS 9.5)	#85271
2" REAR DRIVE LINE SPACER (6.0 GAS 10.5)	#85272
2" REAR DRIVE LINE SPACER (DIESEL 1410 U JOINT)	#85273
2" REAR DRIVE LINE SPACER (DIESEL 1480 U JOINT)	#85274
CV FRONT DRIVE LINE (GAS 6.0)	#85275
TRACTION BAR KIT 65" (CREW CAB SHORT BED)	#85247
TRACTION BAR KIT 75" (CREW CAB LONG BED)	#85248
DOUBLE REAR SHOCK BKT KIT	#85249
REAR AIR BAG KIT (USE WITH 10" REAR SPRINGS)	#85250
HEAVY DUTY HEIMS JOINT STEERING	#85243
HEIMS JOINT SWAY BAR END LINK KIT (FRONT)	#85244
DOUBLE STEERING STABILIZER KIT	#85246
FRONT DRIVE SHAFT (DIESEL)	#85276
2WD/4WD 2" TORSION LIFT KEYS	#50010
IDLE ARM BRACE	#85251



1999-2000 CHEVY NON HD 4WD

4WD BASIC KIT

1999-2000 16" CHEVY /GMC 2500/3500	#85409
COMPONET BOX 1	#C8540-1
COMPONET BOX 2	#C8530-4
COMPRESSION STRUTS	#C8530-5
HARDWARE KIT 4WD	#C8540-7
12" REAR SPRINGS	#85345
4" REAR BLOCK AND U BOLT KIT	
STEEL BRAIDED BRAKE LINE (SINGLE REAR LINE)	#85422
CV FRONT DRIVE SHAFT	#85475

2001-2010 CHEVY HD 4WD

4WD BASIC KIT

2001-2006 16" CHEVY /GMC 1500HD/2500/3500	#85402
COMPONET BOX 1	#C8540-1
COMPONET BOX 2	#C8540-4
COMPRESSION STRUTS	#C8540-5
HARDWARE KIT 4WD	#C8540-8
12" REAR SPRINGS	#85345
4" REAR BLOCK AND U BOLT KIT	#85333
STEEL BRAIDED BRAKE LINE (SINGLE REAR LINE)	#85422
CV FRONT DRIVE LINE	#85476

(4WD BASIC KIT FOR LT MODELS ONLY)

2007-2010 16" CHEVY /GMC 1500HD/2500/3500	#85404
COMPONET BOX 1	#C8540-1
COMPONET BOX 2	#C8540-4
COMPRESSION STRUTS	#C8540-5
HARDWARE KIT 4WD	#C8540-8
12" REAR SPRINGS	#85345
4" REAR BLOCK AND U BOLT KIT	#85333
STEEL BRAIDED BRAKE LINE (SINGLE REAR LINE)	#85426
CV FRONT DRIVE LINE	#85476

(4WD BASIC KIT FOR LTZ MODELS ONLY)

2007-2010 16" CHEVY /GMC 1500HD/2500/3500	#85406
COMPONET BOX 1	#C8540-1
COMPONET BOX 2	#C8540-4
COMPRESSION STRUTS	#C8540-5
HARDWARE KIT 4WD	#C8540-8
12" REAR SPRINGS	#85345
4" REAR BLOCK AND U BOLT KIT	#85333
REAR STEEL BRAIDED BRAKE LINE (DUAL REAR LINE)	#85427
CV FRONT DRIVE LINE	#85476

DOUBLE FRONT SHOCK UPGRADE

DOUBLE SHOCK HOOPS W/ UNI BAL UPPER A ARM	#85238
DOUBLE SHOCK HOOPS W/ BALL JOINT UPPER A ARM	#85239
CHROME FTS 2.0 R/R 12" TRAVEL	#C2012-625R
BRUSHED FTS 2.0 R/R 12" TRAVEL	#B2012-625R

SINGLE FRONT SHOCK UPGRADE

BRUSHED FTS 2.0 R/R STEM 10" TRAVEL	#B2010-625RS
CHROME FTS 2.0 R/R STEM 10" TRAVEL	#C2010-625RS

DOUBLE REAR SHOCK UPGRADE

CHROME FTS 12" TRAVEL R/R	#C2012-875R
BRUSHED FTS 12" TRAVEL R/R	#B2012-875R
DOUBLE REAR SHOCK BRACKETS	#85449

SINGLE REAR SHOCK UPGRADE

CHROME FTS 16" TRAVEL R/R	#C2016-875R
BRUSHED FTS 16" TRAVEL R/R	#B2016-875R

9.5 "AND 12 " 2002 - 2010 CHEVY 2500 SUBURBAN, AVALANCHE, YUKON XL

2002-2010 9.5 " CHEVY SUBURBAN / AVALANCHE 2WD

2WD BASIC KIT

2002-2006 9.5" CHEVY SUBURBAN / AVALANCHE	#85213
COMPONET BOX 1	#C8520-1
COMPONET BOX 2	#C8520-13
HARDWARE KIT 2WD	#C8520-16
10" REAR SPRINGS	#85238
STEEL BRAIDED BRAKE LINE (SINGLE REAR LINE)	#85222

2WD BASIC KIT

2007 9.5" CHEVY SUBURBAN / AVALANCHE	#85215
COMPONET BOX 1	#C8520-1
COMPONET BOX 2	#C8520-13
HARDWARE KIT 2WD	#C8520-16
10" REAR SPRINGS	#85238
STEEL BRAIDED BRAKE LINE (SINGLE REAR LINE)	#85226

2WD BASIC KIT

2008-2010 9.5" CHEVY SUBURBAN / AVALANCHE	#85216
COMPONET BOX 1	#C8520-1
COMPONET BOX 2	#C8520-13
HARDWARE KIT 2WD	#C8520-16
10" REAR SPRINGS	#85238
STEEL BRAIDED BRAKE LINE (DUAL REAR LINE)	#85227

2002-2010 9.5 " CHEVY SUBURBAN / AVALANCHE 4WD

4WD BASIC KIT

2002-2006 9.5" CHEVY SUBURBAN / AVALANCHE	#85217
COMPONET BOX 1	#C8520-1
COMPONET BOX 2	#C8520-14
HARDWARE KIT 4WD	#C8520-18
10" REAR SPRINGS	#85238
STEEL BRAIDED BRAKE LINE (SINGLE REAR LINE)	#85222
CV FRONT DRIVE SHAFT	#85275

4WD BASIC KIT

2007 9.5" CHEVY SUBURBAN / AVALANCHE	#85218
COMPONET BOX 1	#C8520-1
COMPONET BOX 2	#C8520-14
HARDWARE KIT 4WD	#C8520-18
10" REAR SPRINGS	#85238
STEEL BRAIDED BRAKE LINE (SINGLE REAR LINE)	#85226
CV FRONT DRIVE SHAFT	#85275

4WD BASIC KIT

2008-2010 9.5" CHEVY SUBURBAN / AVALANCHE	#85219
COMPONET BOX 1	#C8520-1
COMPONET BOX 2	#C8520-14
HARDWARE KIT 4WD	#C8520-18
10" REAR SPRINGS	#85238
STEEL BRAIDED BRAKE LINE (DUAL REAR LINE)	#85227
CV FRONT DRIVE SHAFT	#85275

2002-2010 12 " CHEVY SUBURBAN / AVALANCHE 2WD

2WD BASIC KIT

2002-2006 12" CHEVY SUBURBAN / AVALANCHE	#85315
COMPONET BOX 1	#C8530-1
COMPONET BOX 2	#C8530-13
HARDWARE KIT 2WD	#C8530-16
12" REAR SPRINGS	#85238
STEEL BRAIDED BRAKE LINE (SINGLE REAR LINE)	#85226

2WD BASIC KIT

2007 12" CHEVY SUBURBAN / AVALANCHE	#85317
COMPONET BOX 1	#C8530-1
COMPONET BOX 2	#C8530-13
HARDWARE KIT 2WD	#C8530-16
12" REAR SPRINGS	#85238
STEEL BRAIDED BRAKE LINE (SINGLE REAR LINE)	#85222

2WD BASIC KIT

2008-2010 12" CHEVY SUBURBAN / AVALANCHE	#85318
COMPONET BOX 1	#C8530-1
COMPONET BOX 2	#C8530-3
HARDWARE KIT 2WD	#C8530-6
12" REAR SPRINGS	#85238
STEEL BRAIDED BRAKE LINE (DUAL REAR LINE)	#85227

2002-2010 12 " CHEVY SUBURBAN / AVALANCHE 4WD

4WD BASIC KIT

2002-2006 12" CHEVY SUBURBAN / AVALANCHE	#85330
COMPONET BOX 1	#C8530-1
COMPONET BOX 2	#C8530-14
HARDWARE KIT 4WD	#C8530-18
12" REAR SPRINGS	#85238
STEEL BRAIDED BRAKE LINE (SINGLE REAR LINE)	#85222
CV FRONT DRIVE SHAFT	#85275

4WD BASIC KIT

2007 12" CHEVY SUBURBAN / AVALANCHE	#85331
COMPONET BOX 1	#C8530-1
COMPONET BOX 2	#C8530-14
HARDWARE KIT 4WD	#C8530-18
12" REAR SPRINGS	#85238
STEEL BRAIDED BRAKE LINE (SINGLE REAR LINE)	#85226
CV FRONT DRIVE SHAFT	#85275

4WD BASIC KIT

2008-2010 12" CHEVY SUBURBAN / AVALANCHE	#85332
COMPONET BOX 1	#C8530-1
COMPONET BOX 2	#C8530-14
HARDWARE KIT 4WD	#C8530-18
12" REAR SPRINGS	#85238
STEEL BRAIDED BRAKE LINE (DUAL REAR LINE)	#85227
CV FRONT DRIVE SHAFT	#85275

7" 2011 - UP CHEVY / GMC 2500HD 3500HD

2011-UP 2WD 7" KIT TRUCK 2500/3500 NON DUALY (W/REAR BLOCK)

MAIN BOX KIT W/ HARDWARE
 REAR BLOCK KIT W/ HARDWARE
 HD SPINDLES


#46102
 #C4600-2
 #C4600-5
 #C8600-4



2011-UP 2WD 7" KIT TRUCK 3500HD DUALY (W/REAR BLOCK)

MAIN BOX KIT W/ HARDWARE
 REAR BLOCK KIT W/ HARDWARE
 HD SPINDLES

#46103
 #C4600-2
 #C4600-6
 #C4600-8

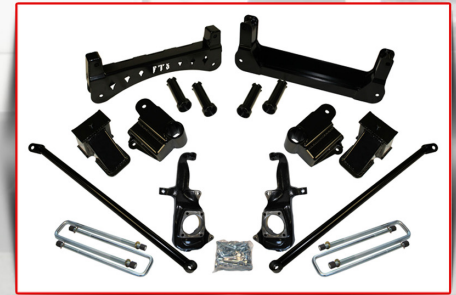

2011-UP 4WD 7" KIT TRUCK 2500/3500 NON DUALY (W/REAR BLOCK)

MAIN BOX KIT W/ HARDWARE
 REAR BLOCK KIT W/ HARDWARE
 REAR LEAF SPRING (PAIR)

#46104
 #C4600-4
 #C4600-5
 #C4600-8

2011-UP 4WD 7" KIT TRUCK 3500HD DUALY (W/REAR BLOCK)

MAIN BOX KIT W/ HARDWARE
 REAR BLOCK KIT W/ HARDWARE
 HD SPINDLES

#46105
 #C4600-4
 #C4600-6
 #C4600-8

NOTE. KITS DO NOT COME WITH BASIC SHOCKS

BASIC SHOCKS (STOCK LOCATION)

2 FRONT AND 2 REAR SHOCKS #51802B-4
 FRONT SHOCKS #924375
 REAR SHOCKS #930001



UPGRADE REAR SHOCKS

(SHOCKS SOLD IN PAIRS W/ 2 BLACK ANODIZED BILLET CLAMP PER SHOCK)

2011 7" HD REAR FTS 2.0 REMOTE RESERVOIR (CHROME) #C2011-625R-K2
 2011 7" HD REAR FTS 2.0 REMOTE RESERVOIR (BRUSHED) #B2011-625R-K2



UPGRADE FRONT SHOCKS (STOCK LOCATION)

(SHOCKS SOLD IN PAIRS W/ 2 BLACK ANODIZED BILLET CLAMP PER SHOCK)

2011 7" HD FRONT FTS 2.0 REMOTE RESERVOIR (CHROME) #C2085-625RUU-K2
 2011 7" HD FRONT FTS 2.0 REMOTE RESERVOIR (BRUSHED) #B2085-625RUU-K2

DOUBLE FRONT SHOCK UPGRADE

DOUBLE SHOCK HOOPS #48140
 TUBULAR UPPER A ARMS (BALL JOINT STYLE) #48141
 DOUBLE SHOCK HOOPS W/ BALL JOINT UPPER A ARMS #48139
 CHROME FTS 2.0 4.5" TRAVEL #C2045-625R
 BRUSHED FTS 2.0 4.5" TRAVEL #B2045-625R

ACCESSORIES

DOUBLE SHOCK HOOPS #48140
 TUBULAR UPPER A ARM (BALL JOINT STYLE) #48141
 DOUBLE SHOCK HOOPS W/BALL JOINT UPPER A ARMS #48139
 HEAVY DUTY HEIMS JOINT STEERING #48143
 7" REAR LEAF SPRINGS (NON DAULLY) #48145
 DOUBLE STEERING STABILIZER KIT #48246
 REAR AIR BAG KIT (USE WITH STOCK SPRING) #48150
 IDLER ARM BRACE #48411
 2WD/ 4WD 2" TORSION KEYS #50010

2011 7" HD REAR 4 LINK KIT

7" REAR 4 LINK KIT #46400
 BOX 1 LOWER LINK BARS #46401
 BOX 2 UPPER LINKS / HARDWARE #46402
 2.5 " - 8" COILOVERS #46403

BRAKE LINE OPTIONS

STEEL BRAIDED BRAKE LINE (DUAL REAR LINE) #47132



10" 2011 - UP LEFT KIT CHEVY GMC 2500HD 3500HD

2011-UP CHEVY GMC 2500HD/3500HD 2WD

2011-UP 10" CHEVY / GMC 2500/3500 2WD TRUCK NON DUAL W/ REAR BLOCKS #48102
 MAIN BOX KIT 1 #C4800-1
 MAIN BOX KIT 2 #C4800-2
 HARDWARE KIT AND REAR BLOCK KIT W/ 18" U BOLTS #C4800-5
 HD SPINDLES #C4800-8
 FRONT / REAR STEEL BRAIDED BRAKE LINES #C4800-9

2011-UP 10" CHEVY / GMC 2500/3500 2WD TRUCK DUAL W/ REAR BLOCKS #48103
 MAIN BOX KIT 1 #C4800-1
 MAIN BOX KIT 2 #C4800-2
 HARDWARE KIT AND REAR BLOCK KIT W/ 20" U BOLTS #C4800-6
 HD SPINDLES #C4800-8
 FRONT / REAR STEEL BRAIDED BRAKE LINES #C4800-9

2011-UP CHEVY GMC 2500HD/3500HD 4WD

2011-UP 10" CHEVY / GMC 2500/3500 4WD TRUCK NON DUAL W/ REAR BLOCKS #48104
 MAIN BOX KIT 1 #C4800-1
 MAIN BOX KIT 2 #C4800-4
 HARDWARE KIT AND REAR BLOCK KIT W/ 18" U BOLTS #C4800-5
 HD SPINDLES #C4800-8
 FRONT / REAR STEEL BRAIDED BRAKE LINES #C4800-9

2011-UP 10" CHEVY / GMC 2500/3500 4WD TRUCK DUAL W/ REAR BLOCKS #48105
 MAIN BOX KIT 1 #C4800-1
 MAIN BOX KIT 2 #C4800-4
 HARDWARE KIT AND REAR BLOCK KIT W/ 20" U BOLTS #C4800-6
 HD SPINDLES #C4800-8
 FRONT / REAR STEEL BRAIDED BRAKE LINES #C4800-9



UPGRADE REAR SHOCKS

(SHOCKS SOLD IN PAIRS W/ 1 BLACK ANODIZED BILLET CLAMP PER SHOCK)
 2011 10" HD REAR FTS 2.0 REMOTE RESERVOIR (CHROME) #C2012-625R-K2
 2011 10" HD REAR FTS 2.0 REMOTE RESERVOIR (BRUSHED) #B2012-625R-K2

UPGRADE FRONT SHOCKS (STOCK LOCATION)

(SHOCKS SOLD IN PAIRS W/ 1 BLACK ANODIZED BILLET CLAMP PER SHOCK)
 2011 10" HD FRONT FTS 2.0 REMOTE RESERVOIR (CHROME) #C2010-625RUU-K2
 2011 10" HD FRONT FTS 2.0 REMOTE RESERVOIR (BRUSHED) #B2010-625RUU-K2

DOUBLE FRONT SHOCK UPGRADE

DOUBLE SHOCK HOOPS #48140
 TUBULAR UPPER A ARMS (BALL JOINT STYLE) #48141
 DOUBLE SHOCK HOOPS W/ BALL JOINT UPPER A ARMS #48139
 CHROME FTS 2.0 4.5" TRAVEL #C2045-625R
 BRUSHED FTS 2.0 4.5" TRAVEL #B2045-625R

2011 10" HD REAR 4 LINK KIT

10" REAR 4 LINK KIT #48400
 BOX 1 LOWER LINK BARS #48401
 BOX 2 UPPER LINKS / HARDWARE #48402
 2.5" - 10" COILOVERS #48403

ACCESSORIES

STEEL BRAIDED BRAKE LINE KIT #48132
 HEAVY DUTY HEIMS JOINT STEERING KIT #48143
 DOUBLE STEERING STABILIZER KIT #48246
 60" TRACTION BAR KIT (EXTRA CAB / CREW CAB SHORT BED) #48146
 63" TRACTION BAR KIT (CREW CAB LONG BED) #48147
 DOUBLE REAR SHOCK BRACKET KIT (W/WELD ON AXLE BRACKET) #48151
 REAR AIR BAG KIT (USE W/ STOCK SPRINGS) #48150
 IDLER ARM BRACE #48411



15" 2011 LIFT KIT CHEVY GMC 2500HD 3500HD

2011-UP CHEVY GMC 2500HD/3500HD 2WD

2011-UP 15" CHEVY / GMC 2500/3500 2WD TRUCK NON DUALY W/ REAR BLOCKS	#49102
MAIN BOX KIT 1	#C4900-1
MAIN BOX KIT 2	#C4900-2
MAINBOX KIT 3	#C4900-8
HARDWARE KIT AND REAR BLOCK KIT W/ 18" U BOLTS	#C4900-5
FRONT / REAR STEEL BRAIDED BRAKE LINES	#49132

2011-UP 15" CHEVY / GMC 2500/3500 2WD TRUCK DUALY W/ REAR BLOCKS	#48103
MAIN BOX KIT 1	#C4900-1
MAIN BOX KIT 2	#C4900-2
MAIN BOX KIT 3	#C4900-8
HARDWARE KIT AND REAR BLOCK KIT W/ 20" U BOLTS	#C4900-6
FRONT / REAR STEEL BRAIDED BRAKE LINES	#49132

2011-UP CHEVY GMC 2500HD/3500HD 4WD

2011-UP 15" CHEVY / GMC 2500/3500 4WD TRUCK NON DUALY W/ REAR BLOCKS	#49104
MAIN BOX KIT 1	#C4900-1
MAIN BOX KIT 2	#C4900-4
MAIN BOX KIT 3	#C4900-8
HARDWARE KIT AND REAR BLOCK KIT W/ 18" U BOLTS	#C4900-5
FRONT / REAR STEEL BRAIDED BRAKE LINES	#49132

2011-UP 15" CHEVY / GMC 2500/3500 4WD TRUCK DUALY W/ REAR BLOCKS	#49105
MAIN BOX KIT 1	#C4900-1
MAIN BOX KIT 2	#C4900-4
MAIN BOX KIT 3	#C4900-8
HARDWARE KIT AND REAR BLOCK KIT W/ 20" U BOLTS	#C4900-6
FRONT / REAR STEEL BRAIDED BRAKE LINES	#49132



UPGRADE REAR SHOCKS

(SHOCKS SOLD IN PAIRS W/ 2 BLACK ANODIZED BILLET CLAMP PER SHOCK)	
2011 15" HD REAR FTS 2.0 REMOTE RESERVOIR (CHROME)	#C2012-625R-K2
2011 15" HD REAR FTS 2.0 REMOTE RESERVOIR (BRUSHED)	#B2012-625R-K2

UPGRADE FRONT SHOCKS (STOCK LOCATION)

(SHOCKS SOLD IN PAIRS W/ 2 BLACK ANODIZED BILLET CLAMP PER SHOCK)	
2011 15" HD FRONT FTS 2.0 REMOTE RESERVOIR (CHROME)	#C2010-625RUU-K2
2011 15" HD FRONT FTS 2.0 REMOTE RESERVOIR (BRUSHED)	#B2010-625RUU-K2

DOUBLE FRONT SHOCK UPGRADE

DOUBLE SHOCK HOOPS	#48140
TUBULAR UPPER A ARMS (BALL JOINT STYLE)	#48141
DOUBLE SHOCK HOOPS W/ BALL JOINT UPPER A ARMS	#48139
CHROME FTS 2.0 4.5" TRAVEL	#C2045-625R
BRUSHED FTS 2.0 4.5" TRAVEL	#B2045-625R

2011 15" HD REAR 4 LINK KIT

15" REAR 4 LINK KIT	#49400
BOX 1 LOWER LINK BARS	#49401
BOX 2 UPPER LINKS / HARDWARE	#49402
2.5" - 10" COILOVERS	#49403

ACCESSORIES

STEEL BRAIDED BRAKE LINE KIT	#49132
HEAVY DUTY HEIMS JOINT STEERING KIT	#49143
DOUBLE STEERING STABILIZER KIT	#49246
63" TRACTION BAR KIT (EXTRA CAB / CREW CAB SHORT BED)	#49147
66" TRACTION BAR KIT (CREW CAB LONG BED)	#49146
DOUBLE REAR SHOCK BRACKET KIT (W/WELD ON AXLE BRACKET)	#85249
REAR AIR BAG KIT (USE W/ STOCK SPRINGS)	#85050
IDLER ARM BRACE	#48411



2000-2006 2WD/4WD SUVs

2000-2006 CADILLAC ESCALADE, GMC DENALI 2WD

2000-2006 7" ESCALADE, DENALI 2WD BASIC KIT	#82107
MAIN BOX KIT 2WD	#8200-7
LEFT KNUCKLE/ RIGHT KNUCKLE	#8200-8
6" REAR SUV KIT	#8200-3B

2000-2006 CADILLAC ESCALADE, GMC DENALI 4WD

2000-2006 7" ESCALADE, DENALI 4WD BASIC KIT	#82109
MAIN BOX KIT 4WD	#8200-9
LEFT KNUCKLE/ RIGHT KNUCKLE	#8200-8
6" REAR SUV KIT	#8200-3B

2000-2006 CHEVY/GMC SUVs 2WD

2000-2006 7" CHEVY / GMC SUV 2WD BASIC KIT	#82106
MAIN BOX KIT 2WD W/ HARDWARE	#C8210-5
6" REAR SUV KIT	#C8210-3B
99-06 1500 SPINDLES	#C8210-8

2000-2006 CHEVY/GMC SUVs 4WD

2000-2006 7" CHEVY / GMC SUV 4WD BASIC KIT	#82108
MAIN BOX KIT 4WD W/ HARDWARE	#C8210-6
6.25 REAR SUV KIT	#C820-3B
99-06 1500 SPINDLES	#C8210-8

1999-2006 2WD/4WD TRUCKS

1999-2006 CHEVY/GMC TRUCKS 2WD

1999-2006 7" CHEVY / GMC TRUCK 2WD BASIC KIT	#82102
MAIN BOX KIT 2WD W/ HARDWARE AND SHOCKS	#C8210-2
99-06 1500 SPINDLES W/ 4" BLOCKS AND U BOLTS KIT	#C8210-7
6" COIL SPRINGS	#C8210-8

1999-2006 7" CHEVY/GMC TRUCK KIT W/ REAR BLOCKS

MAIN BOX KIT 2WD W/ HARDWARE, BLOCK AND U BOLT KIT	#82103
6" COIL SPRINGS	#C8210-5
99-06 1500 SPINDLES W/ 7" BLOCKS AND U BOLTS KIT	#C8210-7
	#C8210-10

1999-2006 CHEVY/GMC TRUCKS 4WD

1999-2006 7" CHEVY / GMC TRUCK 4WD BASIC KIT	#82104
MAIN BOX KIT 4WD W/ HARDWARE	#C8200-4
REAR BLOCK KIT	#C8200-5
99-06 1500 SPINDLES	#C8200-8



DOUBLE FRONT SHOCK UPGRADE

DOUBLE SHOCK HOOPS W/ UPPER A ARM	#82600
2.0 REMOTE RESERVOIR (CHROME FINISH)	#C2065-625R
2.0 REMOTE RESERVOIR (BRUSHED FINISH)	#B2065-625R

SINGLE FRONT SHOCK UPGRADE

2.0 REMOTE RESERVOIR STEM / U (CHROME FINISH)	#C2085-625RSU
2.0 REMOTE RESERVOIR STEM / U (BRUSHED FINISH)	#B2065-625RSU

SINGLE REAR SHOCK UPGRADE

2.0 REMOTE RESERVOIR (CHROME FINISH)	#C2012-625R
2.0 REMOTE RESERVOIR (BRUSHED FINISH)	#B2012625R

DOUBLE REAR SHOCK UPGRADE (TRUCK ONLY)

2.0 REMOTE RESERVOIR (CHROME FINISH)	#C2085-625R
2.0 REMOTE RESERVOIR (BRUSHED FINISH)	#B2085-625R
DOUBLE REAR SHOCK BRACKET	#85249



ACCESSORIES

STEEL BRAIDED BRAKE LINE KIT (SINGLE REAR LINE)	#84926
STEEL BRAIDED BRAKE LINE KIT (DAUL REAR LINE)	#84927
HEAVY DUTY HEIMS JOINT STEERING KIT	#85943
DOUBLE STEERING STABILIZER KIT	#85946
48" TRACTION BAR KIT (STANDARD CAB SHORT BED)	#85258
60" TRACTION BAR KIT (EXTRA CAB /CREW CAB SHORT BED)	#85247
65" TRACTION BAR KIT (EXTRA CAB LONG BED)	#85247
DOUBLE REAR SHOCK BRACKET KIT (W/WELD ON AXLE BRACKET)	#85049
REAR AIR BAG KIT (USE W/ STOCK SPRINGS)	#85050
REAR AIR BAG KIT (USE W/ FTS 7" SPRINGS)	#85051

9.5" AND 12" 1999 - 2006 CHEVY 1500

1999-2006 9.5" CHEVY 1500 2WD/4WD

1999-2006 9.5" CHEVY / GMC 1500 4WD BASIC KIT

COMPONENT BOX 1	#85411
COMPONENT BOX 2	#C8541-1
10" REAR SPRINGS	#C8541-4
CV FRONT DRIVE SHAFT	#85445
	#85475

1999-2006 2WD 9.5" TAHOE SUBURBAN AVALANCHE YUKON KIT

COMPONENT BOX 1	#85412
COMPONENT BOX 2	#C85411
9.5 " REAR SUV KIT	#C85412
	#85446

1999-2006 4WD 9.5" TAHOE SUBURBAN AVALANCHE YUKON KIT

COMPONENT BOX 1	#85413
COMPONENT BOX 2	#C8541-1
9.5 " REAR SUV KIT	#C8541-3
CV FRONT DRIVE SHAFT	#85446
	#85475



DOUBLE FRONT SHOCK UPGRADE

DOUBLE SHOCK HOOPS W/ UPPER A ARM	#85410
2.0 REMOTE RESERVOIR (CHROME FINISH)	#C2085-625R
2.0 REMOTE RESERVOIR (BRUSHED FINISH)	#B2085-625R

SINGLE FRONT SHOCK UPGRADE

2.0 REMOTE RESERVOIR (CHROME FINISH)	#C2010-625RSU
2.0 REMOTE RESERVOIR (BRUSHED FINISH)	#B2010-625RSU

SINGLE REAR SHOCK UPGRADE

2.0 REMOTE RESERVOIR (CHROME FINISH)	#C2012-625R
2.0 REMOTE RESERVOIR (BRUSHED FINISH)	#B2012625R

DOUBLE REAR SHOCK UPGRADE (TRUCK ONLY)

2.0 REMOTE RESERVOIR (CHROME FINISH)	#C2010-625R
2.0 REMOTE RESERVOIR (BRUSHED FINISH)	#B2010-625R
DOUBLE REAR SHOCK BRACKET	#85449

ACCESSORIES

10" REAR LEAF SPRINGS (PAIR)	#85445
12" REAR LEAF SPRINGS (PAIR)	#85345
STEEL BRAIDED BRAKE LINES (SINGLE REAR)	#85222
DOUBLE SHOCK HOOPS W/ BALL JOINT UPPER A ARMS	#85410
DOUBLE SHOCK HOOPS	#85440
TUBULAR UPPER A ARMS (BALL JOINT)	#85441
TUBULAR UPPER A ARMS (UNIBALL)	#85442
HEAVY DUTY HEIMS JOINT STEERING	#85443
HEIMS JOINT SWAY BAR ENDLINKS (FRONT)	#85444
DOUBLE STEERING STABILIZER KIT	#85446
TRACTION BARS 60" (STANDARD CAB SHORT BED)	#85447
TRACTION BARS 65" (CREW CAB SHORT BED)	#85448
TRACTION BARS 65" (EXTRA CAB SHORT BED)	#85448
DOUBLE REAR SHOCK BRACKETS	#85449
REAR AIR BAG KIT (USE W/10" REAR SPRINGS)	#85250
REAR AIR BAG KIT (USE W/12" REAR SPRINGS)	#85350
IDLER ARM BRACE	#85451
2" REAR DRIVE LINE SPACER (USE W/ 4.8 OR 5.3)	#85471
2" REAR DRIVE LINE SPACER (USE W/ 6.0)	#85472
CV FRONT DRIVE LINE (4.8, 5.3, 6.0)	#85475

1999-2006 12" CHEVY 1500 2WD/4WD

1999-2006 12" CHEVY/GMC 1500 4WD BASIC KIT

COMPONENT BOX 1	#85501
COMPONENT BOX 2	#C8550-1
HARDWARE KIT 4WD	#C8550-4
12" REAR SPRINGS	#C8550-8
FRONT AND REAR STEEL BRAIDED BRAKE LINES	#85545
CV FRONT DRIVE LINE	#85222
	#85475

2000-2006 2WD 9.5" TAHOE SUBURBAN AVALANCHE YUKON KIT

COMPONENT BOX 1	#85502
COMPONENT BOX 2	#C8550-1
12" REAR SUV KIT	#C8550-2
FRONT AND REAR STEEL BRAIDED BRAKE LINES	#85546
	#85222

2000-2006 4WD 9.5" TAHOE SUBURBAN AVALANCHE YUKON KIT

COMPONENT BOX 1	#85503
COMPONENT BOX 2	#C8550-1
HARDWARE KIT 4WD	#C8550-4
12" REAR SUV KIT	#C8550-8
FRONT AND REAR STEEL BRAIDED BRAKE LINES	#85546
CV FRONT DRIVE LINE	#85222
	#85475

DOUBLE FRONT SHOCK UPGRADE

DOUBLE SHOCK HOOPS W/ UPPER A ARM	#85410
2.0 REMOTE RESERVOIR (CHROME FINISH)	#C2010-625R
2.0 REMOTE RESERVOIR (BRUSHED FINISH)	#B2010-625R

SINGLE FRONT SHOCK UPGRADE

2.0 REMOTE RESERVOIR (CHROME FINISH)	#C2011-625RSU
2.0 REMOTE RESERVOIR (BRUSHED FINISH)	#B2011-625RSU

SINGLE REAR SHOCK UPGRADE

2.0 REMOTE RESERVOIR (CHROME FINISH)	#C2014-625R
2.0 REMOTE RESERVOIR (BRUSHED FINISH)	#B2014-625R

DOUBLE REAR SHOCK UPGRADE (TRUCK ONLY)

2.0 REMOTE RESERVOIR (CHROME FINISH)	#C2012-625R
2.0 REMOTE RESERVOIR (BRUSHED FINISH)	#B2012-625R
DOUBLE REAR SHOCK BRACKET	#85449

15" AND 18" 1999 - 2006 CHEVY 1500

1999-2006 15" CHEVY 1500 2WD/4WD

4WD BASIC KIT

1999-2006 15" CHEVY / GMC 1500

	#85601
COMPONET BOX 1	#C8560-1
COMPONET BOX 2	#C8560-4
COMPONET BOX 3	#C8560-5
12" REAR SPRINGS	#85445
4" REAR BLOCK KIT	#C8560-10
FRONT AND REAR STEEL BRAIDED BRAKE LINES	#85622
CV FRONT DRIVE SHAFT	#85675

2WD 1999-2006 15" CHEVY / GMC TAHOE SUBURBAN AVALANCHE YUKON KIT FRONT KIT W/ REAR KIT

	#85602
COMPONET BOX 1	#C8560-1
COMPONET BOX 2	#C8560-2
COMPONET BOX 3	#C8560-5
REAR 15" SUV KIT	#85656
REAR LOWER TRAILING BARS	#85657
FRONT AND REAR STEEL BRAIDED BRAKE LINES	#85622

4WD 1999-2006 15" CHEVY / GMC TAHOE SUBURBAN AVALANCHE YUKON KIT FRONT KIT W/ REAR KIT

	#85603
COMPONET BOX 1	#C8560-1
COMPONET BOX 2	#C8560-3
COMPONET BOX 3	#C8560-5
REAR 15" SUV KIT	#85656
REAR LOWER TRAILING BARS	#85657
FRONT AND REAR STEEL BRAIDED BRAKE LINES	#85622
CV FRONT DRIVE SHAFT	#85675

REAR DRIVE LINE OPTIONS

10 BOLT 8.5 " REAR AXLE W/ 3R U JOINT	#85471
14 BOLT 9.5 REAR AXLE W/ 1350 U JOINT	#85472



1999-2006 18" CHEVY 1500 2WD/4WD

4WD BASIC KIT

1999-2006 18" CHEVY / GMC 1500

	#85701
COMPONET BOX 1	#C8760-1
COMPONET BOX 2	#C8760-4
COMPONET BOX 3	#C8760-5
12" REAR SPRINGS	#85445
4" REAR BLOCK KIT	#C8560-10
FRONT AND REAR STEEL BRAIDED BRAKE LINES	#85622
CV FRONT DRIVE SHAFT	#85675

2WD 1999-2006 18" CHEVY / GMC TAHOE SUBURBAN AVALANCHE YUKON KIT FRONT KIT W/ REAR KIT

	#85702
COMPONET BOX 1	#C8570-1
COMPONET BOX 2	#C8570-2
COMPONET BOX 3	#C8570-5
REAR 15" SUV KIT	#85656
REAR LOWER TRAILING BARS	#85657
FRONT AND REAR STEEL BRAIDED BRAKE LINES	#85622

4WD 1999-2006 18" CHEVY / GMC TAHOE SUBURBAN AVALANCHE YUKON KIT FRONT KIT W/ REAR KIT

	#85703
COMPONET BOX 1	#C8570-1
COMPONET BOX 2	#C8570-3
COMPONET BOX 3	#C8570-5
REAR 15" SUV KIT	#85656
REAR LOWER TRAILING BARS	#85657
FRONT AND REAR STEEL BRAIDED BRAKE LINES	#85622
CV FRONT DRIVE SHAFT	#85675

REAR DRIVE LINE OPTIONS

10 BOLT 8.5 " REAR AXLE W/ 3R U JOINT	#85471
14 BOLT 9.5 REAR AXLE W/ 1350 U JOINT	#85472



6.5" - 15" 1988 - 1998 CHEVY GMC 1500 TRUCK AND SUV

6.5" 1988-1998 CHEVY / GMC TRUCK AND SUV

1988-1998 4WD 6.5" CHEVY/GMC TRUCK KIT

COMPONENT BOX 1
COMPONENT BOX 2
REAR KIT

#83101-T
#C8310-2
#C8310-4
#C8310-5
#83102-4D
#83102-2D
#C8310-2
#C8310-3
#C8310-5

1988-1998 4WD 6.5" CHEVY/GMC 4DR TAHOE KIT

1992-1998 4WD 6.5" CHEVY/GMC 2DR TAHOE / SUBURBAN KIT

COMPONENT BOX 1
COMPONENT BOX 2
REAR KIT



12" 1988-1998 CHEVY / GMC TRUCK AND SUV

1988-1998 4WD 12" CHEVY/GMC TRUCK KIT

COMPONENT BOX 1
COMPONENT BOX 2
COMPONENT BOX 3
12" REAR SPRINGS

#83301
#C8330-2
#C8330-4
#C8330-6
#83308

1988-1998 4WD 12" CHEVY/GMC 4DR TAHOE KIT

COMPONENT BOX 1
COMPONENT BOX 2
COMPONENT BOX 3
12" REAR SPRINGS

#83302
#C8330-2
#C8330-3
#C8330-7
#83308

1988-1998 4WD 12" CHEVY/GMC SUBURBAN KIT

COMPONENT BOX 1
COMPONENT BOX 2
COMPONENT BOX 3
12" REAR SPRINGS

#83303
#C8330-2
#C8330-3
#C8330-6
#83308



9.5" 1988-1998 CHEVY / GMC TRUCK AND SUV

1988-1998 4WD 9.5" CHEVY/GMC TRUCK

COMPONENT BOX 1
COMPONENT BOX 2
COMPONENT BOX 3

#83201
#C8320-2
#C8320-4
#C8320-6
#83208
#83222

10" REAR SPRINGS
STEEL BRAIDED BRAKE LINES (SINGLE REAR LINE)

1988-1998 4WD 9.5" CHEVY/GMC 4DR TAHOE KIT

COMPONENT BOX 1
COMPONENT BOX 2
COMPONENT BOX 3

#83202
#C8320-2
#C8320-3
#C8320-7
#83208
#83222

10" REAR SPRINGS
STEEL BRAIDED BRAKE LINES (SINGLE REAR LINE)

1988-1998 4WD 9.5" CHEVY/GMC SUBURBAN KIT

COMPONENT BOX 1
COMPONENT BOX 2
COMPONENT BOX 3

#83203
#C8320-2
#C8320-3
#C8320-6
#85208
#83222

10" REAR SPRINGS

STEEL BRAIDED BRAKE LINES (SINGLE REAR LINE)



15" 1988-1998 CHEVY / GMC TRUCK AND SUV

1988-1998 4WD 15" CHEVY/GMC TRUCK KIT

COMPONENT BOX 1
COMPONENT BOX 2
COMPONENT BOX 3

#83401
#C8340-2
#C8340-4
#C8340-6
#83408

12" REAR SPRINGS

1988-1998 4WD 15" CHEVY/GMC 4DR TAHOE KIT

COMPONENT BOX 1
COMPONENT BOX 2
COMPONENT BOX 3

#83402
#C8340-2
#C8340-3
#C8340-7
#83408

12" REAR SPRINGS

1988-1998 4WD 15" CHEVY/GMC SUBURBAN KIT

COMPONENT BOX 1
COMPONENT BOX 2
COMPONENT BOX 3

#83403
#C8340-2
#C8340-3
#C8340-6
#83408

12" REAR SPRINGS



6.5" AND 7" 2003 - 2010 HUMMER H2 AND 2002 - 2010 CHEVY 2500 SUBURBAN, AVALANCHE



2003-2010 2WD 6.5" HUMMER H2

2003-2010 6.5" HUMMER H2 BASIC KIT W/ AIR RIDE #85003
 COMPONENT BOX 1 #C8503-1
 COMPONENT BOX 2 #C8503-2
 LEFT AND RIGHT STEERING KNUCKLES #C8503-7
 REAR KIT #C8503-8
 AIR RIDE KIT #C8503-9
 CV DRIVE LINE #85507

2003-2010 6.5" HUMMER H2 BASIC KIT W/O AIR RIDE #85004
 COMPONENT BOX 1 #C8504-1
 COMPONENT BOX 2 #C8504-2
 LEFT AND RIGHT STEERING KNUCKLES #C8504-7
 REAR KIT #C8504-9
 CV DRIVE LINE #85507



HUMMER UPGRADE OPTIONS

2003-2010 DOUBLE SHOCK HOOPS #85040
 2003-2010 TUBULAR UPPER A ARM (BALL JOINT STYLE) #85041
 2003-2010 DOUBLE SHOCK HOOPS W/BALL JOINT UPPER A ARMS #85042
 2003-2010 HEAVY DUTY HEIMS JOINT STEERING #85043
 2003-2010 DOUBLE STEERING STABILIZER KIT #85046
 2003-2010 2WD/ 4WD 2" TORSION KEYS #85045
 2003-2010 IDLER ARM BRACE HUMMER H2 #85059
 2003-2010 REAR LOWER TRAILING ARMS #85060
 2003-2010 REAR TUBULAR TRACK BAR #85061
 2003-2010 REAR HEIMS JOINT ENDLINK KIT #85062
 2003-2010 CV FRONT DRIVE LINE 36" #85057

2003-2010 2WD 7" HUMMER H2

2003-2010 7" HUMMER H2 BASIC KIT W/ AIR RIDE #85107
 COMPONENT BOX 1 #C8517-1
 LEFT AND RIGHT STEERING KNUCKLES #C85100-8
 REAR KIT #C8517-8
 AIR RIDE KIT #C8517-9
 CV DRIVE LINE #85057
2003-2010 7" HUMMER H2 BASIC KIT W/O AIR RIDE #85103
 COMPONENT BOX 1 #C8510-1
 LEFT AND RIGHT STEERING KNUCKLES #C85100-8
 REAR KIT #C8510-8
 CV DRIVE LINE #85057

HUMMER BRAKE LINE OPTIONS

2003-2010 STEEL BRAIDED BRAKE LINE (DUAL REAR LINE) #85028

2500 SUBURBAN, AVALANCHE UPGRADE OPTIONS

2002-2010 DOUBLE SHOCK HOOPS #85040
 2002-2010 TUBULAR UPPER A ARM (BALL JOINT STYLE) #85041
 2002-2010 DOUBLE SHOCK HOOPS W/BALL JOINT UPPER A ARMS #85042
 2002-2010 HEAVY DUTY HEIMS JOINT STEERING #85043
 2002-2010 DOUBLE STEERING STABILIZER KIT #85046
 2002-2010 2WD/ 4WD 2" TORSION KEYS #50010
 2000-2010 7" REAR LEAF SPRINGS #85045
 2000-2010 TRACTION BARS 60" CREW CAB SHORT BED #85048
 2000-2010 REAR AIR BAG KIT (USE WITH STOCK SPRING) #85050
 2000-2010 REAR AIR BAG KIT (USE WITH 7" REAR SPRING) #85051



SUBURBAN AVALANCHE BRAKE LINE OPTIONS

2002-2006 2WD/4WD STEEL BRAIDED BRAKE LINE (SINGLE REAR LINE) #85022
 2007 2WD/4WD STEEL BRAIDED BRAKE LINE (SINGLE REAR LINE) #85026
 2008-2010 2WD/4WD STEEL BRAIDED BRAKE LINE (DUAL REAR LINE) #85027

9.5" AND 12" 2003 - 2010 HUMMER H2 SUV SUT AND HUMMER H3

2003-2010 9.5" H2 HUMMER

2003-2010 9.5" HUMMER H2 4WD BASIC KIT W/REAR COILS	#85200
COMPONET BOX 1	#C8521-1
COMPONET BOX 2	#C8521-4
HARDWARE KIT 4WD	#C8521-8
9.5" REAR H2 KIT (COIL)	#85218
STEEL BRAIDED BRAKE LINE KIT (DUAL REAR LINE)	#85228
CV FRONT DRIVE SHAFT	#85257



2003-2010 9.5" HUMMER H2 4WD BASIC KIT W/REAR AIR RIDE	#85203
COMPONET BOX 1	#C8521-1
COMPONET BOX 2	#C8521-4
HARDWARE KIT 4WD	#C8521-8
9.5" REAR H2 KIT (W/ AIR RIDE)	#85219
STEEL BRAIDED BRAKE LINE KIT (DUAL REAR LINE)	#85228
CV FRONT DRIVE SHAFT	#85257



2003-2010 12" H2 HUMMER

2003-2010 12" HUMMER H2 4WD BASIC KIT W/REAR COILS	#85300
COMPONET BOX 1	#C8531-1
COMPONET BOX 2	#C8531-4
HARDWARE KIT 4WD	#C8531-8
12" REAR H2 KIT (COIL)	#85318
STEEL BRAIDED BRAKE LINE KIT (DUAL REAR LINE)	#85228
CV FRONT DRIVE SHAFT	#85257

2003-2010 H2 HUMMER REAR KITS ONLY

9.5" REAR HUMMER KIT (COIL)	#85218
9.5" REAR HUMMER KIT (AIR)	#85219
12" REAR HUMMER KIT (COIL)	#85318
12" REAR HUMMER KIT (AIR)	#85319

2003-2010 12" HUMMER H2 4WD BASIC KIT W/REAR AIR RIDE	#85303
COMPONET BOX 1	#C8531-1
COMPONET BOX 2	#C8531-4
HARDWARE KIT 4WD	#C8531-8
12" REAR H2 KIT (W/ AIR RIDE)	#85319
STEEL BRAIDED BRAKE LINE KIT (DUAL REAR LINE)	#85228
CV FRONT DRIVE SHAFT	#85257

ACCESSORIES

STEEL BRAIDED BRAKE LINES (SINGLE REAR)	#85228
DOUBLE SHOCK HOOPS	#85240
DOUBLE SHOCK HOOPS W/ UNI BALL UPPER A ARMS	#85238
DOUBLE SHOCK HOOPS W/ BALL JOINT UPPER A ARMS	#85239
TUBULAR UPPER A ARMS (BALL JOINT)	#85241
TUBULAR UPPER A ARMS (UNIBALL)	#85242
HEAVY DUTY HEIMS JOINT STEERING	#85243
HEIMS JOINT SWAY BAR ENDLINKS (FRONT)	#85244
DOUBLE STEERING STABILIZER KIT	#85246
TUBULAR LOWER TRAILING ARMS	#85060
TUBULAR TRACK BAR	#85061
IDLER ARM BRACE	#85059
2" REAR DRIVE LINE SPACER	#85058
CV FRONT DRIVE LINE (9.5"KIT)	#85257
CV FRONT DRIVE LINE (12"KIT)	#85357
2" TORSION LIFT KEYS	#50010

10" 2006-2010 HUMMER H3

2006-2010	10" FRONT KIT	#94001
2006-2010	10" REAR KIT	#94002
2006-2010	DOUBLE FRONT SHOCK HOOPS	#94040
2006-2010	UNIBALL UPPER A ARMS	#94042
2006-2010	STEEL BRAIDED BRAKE LINES	#94028
2006-2010	REAR SWAY BAR HEIMS JOINT END LINK KIT	#94062
2006-2010	CV REAR DRIVE LINE	#94056
2006-2010	CV FRONT DRIVE LINE W/ FLANGE	#94057



6" LIFT KIT FORD F150 2004 - 2011



2004-2008 FORD F150 2WD

2004-2008 6" FORD F150 2WD BASIC KIT

MAIN BOX KIT 2WD W/ HARDWARE	#74001
2WD LEFT KNUCKLE/ RIGHT KNUCKLE	#7400-1-2
REAR BLOCK AND U BOLTS	#7400-5
	#7400-3

2004-2008 6" FORD F150 2WD W/ COILOVERS

MAIN BOX KIT 2WD W/ HARDWARE	#74011
2WD LEFT KNUCKLE/ RIGHT KNUCKLE	#7400-1-2
FTS 2.5 EMULSION COILOVER (PAIR)	#7400-5
REAR BLOCK AND U BOLTS	#7400-7
	#7400-3

2009-2011 FORD F150 2WD

2009-2011 6" FORD F150 2WD BASIC KIT

MAIN BOX KIT 2WD W/ HARDWARE	#75004
2WD LEFT KNUCKLE/ RIGHT KNUCKLE	#75001-2
REAR BLOCK AND U BOLTS	#75001-5
	#75001-3

2009-2011 6" FORD F150 2WD W/ COILOVERS

MAIN BOX KIT 2WD W/ HARDWARE	#75014
2WD LEFT KNUCKLE/ RIGHT KNUCKLE	#75001-2
FTS 2.5 EMULSION COILOVER (PAIR)	#75001-5
REAR BLOCK AND U BOLTS	#75001-7
	#75001-3

2004-2008 FORD F150 4WD

2004-2008 6" FORD F150 4WD BASIC KIT

MAIN BOX KIT 4WD W/ HARDWARE	#74002
4WD LEFT KNUCKLE/ RIGHT KNUCKLE	#7400-1-4
REAR BLOCK AND U BOLTS	#7400-2
	#7400-3

2004-2008 6" FORD F150 4WD W/ COILOVERS

MAIN BOX KIT 4WD W/ HARDWARE	#74012
4WD LEFT KNUCKLE/ RIGHT KNUCKLE	#74011-4
FTS 2.5 EMULSION COILOVER (PAIR)	#74011-2
REAR BLOCK AND U BOLTS	#74011-7
	#74011-3

2009-2011 FORD F150 4WD

2009-2011 6" FORD F150 4WD BASIC KIT

MAIN BOX KIT 4WD W/ HARDWARE	#75005
4WD LEFT KNUCKLE/ RIGHT KNUCKLE	#75001-4
REAR BLOCK AND U BOLTS	#75001-2
	#75001-3

2009-2011 6" FORD F150 4WD W/ COILOVERS

MAIN BOX KIT 4WD W/ HARDWARE	#75015
4WD LEFT KNUCKLE/ RIGHT KNUCKLE	#75011-4
FTS 2.5 EMULSION COILOVER (PAIR)	#75011-2
REAR BLOCK AND U BOLTS	#75011-7
	#75011-3

ACCESSORIES

2WD/4WD STEEL BRAIDED BRAKE LINE KIT	#74022
4WD 2.5 FRONT COILOVER UPGRADE	#74010
4WD DOUBLE STEERING STABILIZER KIT	#74030
4WD TRACTION BAR KIT (60" STANDARD CAB SHORT BED)	#74146
4WD TRACTION BAR KIT (65" CREW CAB SHORT BED)	#74147
4WD TRACTION BAR KIT (70" EXTRA CAB LONG BED)	#74148

ACCESSORIES

2WD/4WD STEEL BRAIDED BRAKE LINE KIT	#75022
2WD/4WD FRONT COILOVER UPGRADE	#75010
4WD TRACTION BAR KIT (60" STANDARD CAB SHORT BED)	#75146
4WD TRACTION BAR KIT (65" CREW CAB SHORT BED)	#75147
4WD TRACTION BAR KIT (75" EXTRA CAB LONG BED)	#75148
4WD TUBULAR UPPER A ARM	#75041
4WD DOUBLE REAR SHOCK BKT	#75149
4WD DOUBLE FRONT SHOCK HOOP	#75040

12" AND 14" 2004 - 2011 FORD F150 2004 2008 EXPEDITION

12" 2004-2008 FORD F150 TRUCK KIT

2004-2010 4WD 12" Front Kit	#74101
2004-2008 4WD 12" Front Kit Stage 2 Coil Over	#74102
2004-2008 4WD STEEL BRAIDED BRAKE LINES	#74122
2004-2008 4WD 2.5 FRONT COIL OVER UPGRADE	#74110
2004-2008 4WD DOUBLE STERING STABILIZER KIT	#74130
2004-2008 4WD 12" REAR SPRINGS	#74145
2004-2008 4WD TUBULAR UPPER A ARM	#74141
2004-2008 4WD DOUBLE REAR SHOCK BKT	#74149
2004-2008 4WD DOUBLE FRONT SHOCK HOOP	#74140
2004-2008 4WD CV FRONT DRIVE LINE	#74170
2004-2008 4WD REAR DRIVE LINE SPACER	#74171
2004-2008 4WD TRACTION BAR KIT 60" (STANDARD CAB SHORT BED)	#74146
2004-2008 4WD TRACTION BAR KIT 65" (CREW CAB SHORT BED)	#74147
2004-2008 4WD TRACTION BAR KIT 75" (EXTRA CAB LONG BED)	#74148



14" 2004-2008 FORD F150 TRUCK KIT

2004-2010 4WD 14" Front Kit	#74201
2004-2008 4WD 14" Front Kit Stage 2 Coil Over	#74202
2004-2008 4WD STEEL BRAIDED BRAKE LINES	#74122
2004-2008 4WD 2.5 FRONT COIL OVER UPGRADE	#74210
2004-2008 4WD DOUBLE STERING STABILIZER KIT	#74130
2004-2008 4WD 14" REAR SPRINGS	#74144
2004-2008 4WD TUBULAR UPPER A ARM	#74141
2004-2008 4WD DOUBLE REAR SHOCK BKT	#74149
2004-2008 4WD DOUBLE FRONT SHOCK HOOP	#74140
2004-2008 4WD CV FRONT DRIVE LINE	#74175
2004-2008 4WD REAR DRIVE LINE SPACER	#74171
2004-2008 4WD TRACTION BAR KIT 60" (STANDARD CAB SHORT BED)	#74146
2004-2008 4WD TRACTION BAR KIT 65" (CREW CAB SHORT BED)	#74147
2004-2008 4WD TRACTION BAR KIT 75" (EXTRA CAB LONG BED)	#74148

14" 2009-2011 FORD F150 TRUCK KIT

2009-2011 4WD 14" Front Kit	#75201
2009-2011 4WD 14" Front Kit Stage 2 Coil Over	#75202
2009-2011 4WD STEEL BRAIDED BRAKE LINES	#75122
2009-2011 4WD 2.5 FRONT COIL OVER UPGRADE	#75210
2009-2011 4WD DOUBLE STERING STABILIZER KIT	#75130
2009-2011 4WD 14" REAR SPRINGS	#75144
2009-2011 4WD TUBULAR UPPER A ARM	#75141
2009-2011 4WD DOUBLE REAR SHOCK BKT	#75149
2009-2011 4WD DOUBLE FRONT SHOCK HOOP	#75140
2009-2011 4WD CV FRONT DRIVE LINE	#75175
2009-2011 4WD REAR DRIVE LINE SPACER	#75171
2009-2011 4WD TRACTION BAR KIT 60" (STANDARD CAB SHORT BED)	#75146
2009-2011 4WD TRACTION BAR KIT 65" (CREW CAB SHORT BED)	#75147
2009-2011 4WD TRACTION BAR KIT 75" (EXTRA CAB LONG BED)	#75148



1999 - 2004 FORD F250/350 AND EXCURSION 4WD



4" BASIC KIT W/REAR BLOCKS

- #78001 FRONT BOX KIT W/REAR BLOCK AND U BOLTS
- #78001-1 FRONT SPRINGS (PAIR)
- #78001-2 FRONT / REAR SHOCKS

6" BASIC KIT W/REAR BLOCKS

- #78101 FRONT BOX KIT W/REAR BLOCK AND U BOLTS
- #78101-1 FRONT SPRINGS (PAIR)
- #78101-2 FRONT / REAR SHOCKS

8" BASIC KIT W/REAR BLOCKS

- #78201 FRONT BOX KIT
- #78201-1 FRONT SPRINGS (PAIR)
- #78201-2 FRONT / REAR SHOCKS
- #78201-3 REAR SPRINGS (PAIR)

- #78002 4" SPRINGS FRONT
- #78003 4" SPRINGS REAR
- #78102 6" SPRINGS FRONT
- #78103 6" SPRINGS REAR
- #78202 8" SPRINGS FRONT
- #78203 8" SPRINGS REAR
- #78302 10" SPRINGS FRONT
- #78303 10" SPRINGS REAR
- #78402 12" SPRINGS FRONT
- #78403 12" SPRINGS REAR
- #78502 14" SPRINGS FRONT
- #78503 14" SPRINGS REAR
- #78602 16" SPRINGS FRONT
- #78603 16" SPRINGS REAR
- #78702 18" SPRINGS FRONT
- #78703 18" SPRINGS REAR
- #78802 20" SPRINGS FRONT
- #78803 20" SPRINGS REAR
- #78902 22" SPRINGS FRONT
- #78903 22" SPRINGS REAR
- #79002 24" SPRINGS FRONT
- #79003 24" SPRINGS REAR
- #79101 3.5" HANGER KIT
- #79201 5.5" HANGER KIT
- #79301 8" HANGER KIT

- 1999-2000 CROSS OVER STEERING KIT #79101
- 1999-2000 CROSS OVER TRACK BAR KIT #79102
- 2001-2004 CROSS OVER STEERING KIT #79111
- 2001-2004 CROSS OVER TRACK BAR KIT #79112
- 1999-2004 TRANSFERCASE RELOCKING RING #79130
- 1999-2004 TRACTION BAR KIT 65" (CC SHORT BED 4" to 8" lift) #79247
- 1999-2004 TRACTION BAR KIT 75" (CC LONG BED 4" to 8" lift) #79248
- 1999-2004 TRACTION BAR KIT 70" (CC SHORT BED 10" to 14" lift) #79249
- 1999-2004 TRACTION BAR KIT 80" (CC LONG BED 10" to 14" lift) #79250
- 1999-2004 TRACTION BAR KIT 80" (CC SHORT BED 16" to 24" lift) #79250
- 1999-2004 TRACTION BAR KIT 85" (CC LONG BED 16" to 24" lift) #79251
- 1999-2004 DOUBLE FRONT SHOCK HOOPS #79240
- 1999-2004 DOUBLE REAR SOCK BKT KIT #79049
- 1999-2004 DOUBLE STEERING STABILIZER KIT #79246
- 1999-2004 2" REAR DRIVE LINE SPACER #79271
- 1999-2000 STEEL BRAIDED BRAKE LINES 4" to 6" lift #79022
- 2001-2004 STEEL BRAIDED BRAKE LINES 4" to 6" lift #79026
- 1999-2000 STEEL BRAIDED BRAKE LINES 8" to 12" lift #79122
- 2001-2004 STEEL BRAIDED BRAKE LINES 8" to 12" lift #79126
- 1999-2000 STEEL BRAIDED BRAKE LINES 14" to 18" lift #79222
- 2001-2004 STEEL BRAIDED BRAKE LINES 14" to 18" lift #79226
- 1999-2000 STEEL BRAIDED BRAKE LINES 20" to 24" lift #79322
- 2001-2004 STEEL BRAIDED BRAKE LINES 20" to 24" lift #79326
- 1999-2004 2" CARRIER BEARING SPACER #79140
- 1999-2004 2.25" CARRIER BEARING SPACER #79141
- 1999-2004 2.5" CARRIER BEARING SPACER #79142
- 1999-2004 2.75" CARRIER BEARING SPACER #79143
- 1999-2004 3" CARRIER BEARING SPACER #79144
- 1999-2004 3.25" CARRIER BEARING SPACER #79145
- 1999-2004 3.5" CARRIER BEARING SPACER #79146
- 1999-2004 3.75" CARRIER BEARING SPACER #79147
- 1999-2004 4" CARRIER BEARING SPACER #79148
- 1999-2004 4.5" CARRIER BEARING SPACER #79149
- 1999-2004 SWAY BAR END LINKS (HEIMS) 4" lift #79600
- 1999-2004 SWAY BAR END LINKS (HEIMS) 6" lift #79601
- 1999-2004 SWAY BAR END LINKS (HEIMS) 8" lift #79602
- 1999-2004 SWAY BAR END LINKS (HEIMS) 10" lift #79603
- 1999-2004 SWAY BAR END LINKS (HEIMS) 12" lift #79604
- 1999-2004 SWAY BAR END LINKS (HEIMS) 14" lift #79605
- 1999-2004 SWAY BAR END LINKS (HEIMS) 16" lift #79607
- 1999-2004 SWAY BAR END LINKS (HEIMS) 18" lift #79608
- 1999-2004 SWAY BAR END LINKS (HEIMS) 20" lift #79609
- 1999-2004 SWAY BAR END LINKS (HEIMS) 22" lift #79610
- 1999-2004 SWAY BAR END LINKS (HEIMS) 24" lift #79611
- 1999-2004 SWAY BAR END LINKS (HEIMS) 26" lift #79612



4" - 10" 2005 - 2007 FORD F250 / F350 LIFT KITS

2005-2007 FORD F250-F350 COIL SPRING FRONT END KIT 4 WD RADIUS ARM KIT W/ FTS 2.0 R/R SHOCKS

2005-2007 4" F250 BASIC KIT W/ REAR BLOCKS	#86540	2005-2007 4" F250 RADIUS ARM KIT W/ REAR BLOCKS	#86541
MAIN BOX KIT W/ HARDWARE	#86540-1	MAIN BOX KIT W/ HARDWARE	#86541-1
4" COIL SPRINGS	#86540-2	4" COIL SPRINGS	#86540-2
3" REAR BLOCK KIT W/ U BOLTS	#86540-3	3" REAR BLOCK KIT W/ U BOLTS	#86540-3
2 FRONT SHOCKS / 2 REAR SHOCKS	#86540-4	2 FRONT 2.0 CHROME R/R STEM ,LOOP W/BILLET CLAMPS	#86540-7
		2 REAR 2.0 CHROME R/R LOOP/LOOP W/BILLET CLAMPS	#86540-8

2005-2007 4" F350 BASIC KIT W/ REAR BLOCKS	#86542	2005-2007 4" F350 RADIUS ARM KIT W/ REAR BLOCKS	#86543
MAIN BOX KIT W/ HARDWARE	#86540-1	MAIN BOX KIT W/ HARDWARE	#86541-1
4" COIL SPRINGS	#86540-2	4" COIL SPRINGS	#86540-2
2" REAR BLOCK KIT W/ U BOLTS	#86542-3	2" REAR BLOCK KIT W/ U BOLTS	#86542-3
2 FRONT SHOCKS / 2 REAR SHOCKS	#86540-4	2 FRONT 2.0 CHROME R/R STEM ,LOOP W/BILLET CLAMPS	#86540-7
		2 REAR 2.0 CHROME R/R LOOP/LOOP W/BILLET CLAMPS	#86540-8

2005-2007 6" F250 BASIC KIT W/ REAR BLOCKS	#86560	2005-2007 6" F250 RADIUS ARM KIT W/ REAR BLOCKS	#86561
MAIN BOX KIT W/ HARDWARE	#86560-1	MAIN BOX KIT W/ HARDWARE	#86561-1
6" COIL SPRINGS	#86560-2	6" COIL SPRINGS	#86560-2
5" REAR BLOCK KIT W/ U BOLTS	#86560-3	5" REAR BLOCK KIT W/ U BOLTS	#86560-3
2 FRONT SHOCKS / 2 REAR SHOCKS	#86560-4	2 FRONT 2.0 CHROME R/R STEM ,LOOP W/BILLET CLAMPS	#86560-7
		2 REAR 2.0 CHROME R/R LOOP/LOOP W/BILLET CLAMPS	#86560-8

2005-2007 6" F350 BASIC KIT W/ REAR BLOCKS	#86662	2005-2007 6" F350 RADIUS ARM KIT W/ REAR BLOCKS	#86563
MAIN BOX KIT W/ HARDWARE	#86560-1	MAIN BOX KIT W/ HARDWARE	#86561-1
6" COIL SPRINGS	#86560-2	6" COIL SPRINGS	#86560-2
4" REAR BLOCK KIT W/ U BOLTS	#86562-3	4" REAR BLOCK KIT W/ U BOLTS	#86562-3
2 FRONT SHOCKS / 2 REAR SHOCKS	#86560-4	2 FRONT 2.0 CHROME R/R STEM ,LOOP W/BILLET CLAMPS	#86560-7
		2 REAR 2.0 CHROME R/R LOOP/LOOP W/BILLET CLAMPS	#86560-8

2005-2007 8" F250/F350 BASIC KIT W/ REAR SPRINGS	#86580	2005-2007 8" F250 RADIUS ARM KIT W/ REAR SPRINGS	#86581
MAIN BOX KIT W/ HARDWARE	#86560-1	MAIN BOX KIT W/ HARDWARE	#86581-1
8" COIL SPRINGS	#86560-2	8" COIL SPRINGS	#86580-2
8" REAR SPRINGS (PAIR)	#86560-3	8" REAR SPRINGS (PAIR)	#86580-6
2 FRONT SHOCKS / 2 REAR SHOCKS	#86560-4	2 FRONT 2.0 CHROME R/R STEM ,LOOP W/BILLET CLAMPS	#86580-7
		2 REAR 2.0 CHROME R/R LOOP/LOOP W/BILLET CLAMPS	#86580-8

2005-2007 10" F250/F350 BASIC KIT W/ REAR SPRINGS	#86642	2005-2007 10" F250 RADIUS ARM KIT W/ REAR SPRINGS	#86511
MAIN BOX KIT W/ HARDWARE	#86510-1	MAIN BOX KIT W/ HARDWARE	#86511-1
10" COIL SPRINGS	#86510-2	10" COIL SPRINGS	#86510-2
10" REAR BLOCK KIT W/ U BOLTS	#86510-3	10" REAR SPRINGS (PAIR)	#86510-6
2 FRONT SHOCKS / 2 REAR SHOCKS	#86510-4	2 FRONT 2.0 CHROME R/R STEM ,LOOP W/BILLET CLAMPS	#86510-7
		2 REAR 2.0 CHROME R/R LOOP/LOOP W/BILLET CLAMPS	#86510-8



4"-10" 2008-2011 FORD F250 F350 LIFT KITS

2008-2011 FORD F250-F350 COIL SPRING FRONT END KIT

2008-2011 4" F250 BASIC KIT W/ REAR BLOCKS	#87540
MAIN BOX KIT W/ HARDWARE	#87540-1
4" COIL SPRINGS	#87540-2
3" REAR BLOCK KIT W/ U BOLTS	#87540-3
2 FRONT SHOCKS / 2 REAR SHOCKS	#87540-4
2008-2011 4" F350 BASIC KIT W/ REAR BLOCKS	#87542
MAIN BOX KIT W/ HARDWARE	#87540-1
4" COIL SPRINGS	#87540-2
2" REAR BLOCK KIT W/ U BOLTS	#87542-3
2 FRONT SHOCKS / 2 REAR SHOCKS	#87540-4
2008-2011 6" F250 BASIC KIT W/ REAR BLOCKS	#87560
MAIN BOX KIT W/ HARDWARE	#87560-1
6" COIL SPRINGS	#87560-2
5" REAR BLOCK KIT W/ U BOLTS	#87560-3
2 FRONT SHOCKS / 2 REAR SHOCKS	#87560-4
2008-2011 6" F350 BASIC KIT W/ REAR BLOCKS	#87662
MAIN BOX KIT W/ HARDWARE	#87560-1
6" COIL SPRINGS	#87560-2
4" REAR BLOCK KIT W/ U BOLTS	#87562-3
2 FRONT SHOCKS / 2 REAR SHOCKS	#87560-4
2008-2011 8" F250/F350 BASIC KIT W/ REAR SPRINGS	#87580
MAIN BOX KIT W/ HARDWARE	#87580-1
8" COIL SPRINGS	#87580-2
8" REAR SPRINGS (PAIR)	#87580-3
2 FRONT SHOCKS / 2 REAR SHOCKS	#87580-4
2008-2011 10" F250/F350 BASIC KIT W/ REAR SPRINGS	#87510
MAIN BOX KIT W/ HARDWARE	#87510-1
COIL SPRINGS	#87510-2
10" REAR BLOCK KIT W/ U BOLTS	#87510-6
10" FRONT SHOCKS / 2 REAR SHOCKS	#87510-4



2008-2011 FORD F250-F350 4 WD RADIUS ARM KIT W/ FTS 2.0 R/R SHOCKS

2008-2011 4" F250 RADIUS ARM KIT W/ REAR BLOCKS	#87541
MAIN BOX KIT W/ HARDWARE	#87541-1
4" COIL SPRINGS	#87540-2
3" REAR BLOCK KIT W/ U BOLTS	#87540-3
2 FRONT 2.0 CHROME R/R STEM ,LOOP W/BILLET CLAMPS	#87540-7
2 REAR 2.0 CHROME R/R LOOP/LOOP W/BILLET CLAMPS	#87540-8
2008-2011 4" 350 RADIUS ARM KIT W/ REAR BLOCKS	#87543
MAIN BOX KIT W/ HARDWARE	#87541-1
4" COIL SPRINGS	#87540-2
2" REAR BLOCK KIT W/ U BOLTS	#87542-3
2 FRONT 2.0 CHROME R/R STEM ,LOOP W/BILLET CLAMPS	#87540-7
2 REAR 2.0 CHROME R/R LOOP/LOOP W/BILLET CLAMPS	#87540-8
2008-2011 6" F250 RADIUS ARM KIT W/ REAR BLOCKS	#87561
MAIN BOX KIT W/ HARDWARE	#87561-1
6" COIL SPRINGS	#87560-2
5" REAR BLOCK KIT W/ U BOLTS	#87560-3
2 FRONT 2.0 CHROME R/R STEM ,LOOP W/BILLET CLAMPS	#87560-7
2 REAR 2.0 CHROME R/R LOOP/LOOP W/BILLET CLAMPS	#87560-8
2008-2011 6" F350 RADIUS ARM KIT W/ REAR BLOCKS	#87563
MAIN BOX KIT W/ HARDWARE	#87561-1
6" COIL SPRINGS	#87560-2
4" REAR BLOCK KIT W/ U BOLTS	#87560-3
2 FRONT 2.0 CHROME R/R STEM ,LOOP W/BILLET CLAMPS	#87560-7
2 REAR 2.0 CHROME R/R LOOP/LOOP W/BILLET CLAMPS	#87560-8
2008-2011 8" F250 RADIUS ARM KIT W/ REAR SPRINGS	#87581
MAIN BOX KIT W/ HARDWARE	#87581-1
8" COIL SPRINGS	#87580-2
8" REAR SPRINGS (PAIR)	#87580-6
2 FRONT 2.0 CHROME R/R STEM ,LOOP W/BILLET CLAMPS	#87580-7
2 REAR 2.0 CHROME R/R LOOP/LOOP W/BILLET CLAMPS	#87580-8
2008-2011 10" F250 RADIUS ARM KIT W/ REAR SPRINGS	#87511
MAIN BOX KIT W/ HARDWARE	#87511-1
10" COIL SPRINGS	#87510-2
10" REAR SPRINGS (PAIR)	#87510-6
2 FRONT 2.0 CHROME R/R STEM ,LOOP W/BILLET CLAMPS	#87510-7
2 REAR 2.0 CHROME R/R LOOP/LOOP W/BILLET CLAMPS	#87510-8



6" - 15" 2010 - 2012 DODGE 2500 3500

6" DODGE 2500/3500 GAS SHORT ARM COMPLETE KIT #63022

- MAIN BOX KIT #63022-1
- COIL SPRINGS (GAS) #63022-2
- SHOCKS #63022-4

6" DODGE 2500/3500 DIESEL SHORT ARM COMPLETE KIT #63030

- MAIN BOX KIT #63022-1
- COIL SPRINGS (DIESEL) #63022-2
- SHOCKS #63022-4

6" DODGE 2500/3500 GAS LONG ARM COMPLETE KIT #64011

- MAIN BOX KIT #64000-1
- COIL SPRINGS (GAS) #64000-13
- SHOCKS #64000-6

6" DODGE 2500/3500 DIESEL LONG ARM COMPLETE KIT #64010


- MAIN BOX KIT #64000-1
- COIL SPRINGS (DIESEL) #64000-13
- SHOCKS #64000-6

8" DODGE 2500/3500 GAS LONG ARM COMPLETE KIT #64041

- MAIN BOX KIT #64000-2
- COIL SPRINGS (GAS) #64000-16
- RELOCKING RING #64000-9
- LINK BARS W/ BUSHING #64000-1

8" DODGE 2500/3500 DIESEL LONG ARM COMPLETE KIT #64040

- MAIN BOX KIT #64000-2
- COIL SPRINGS (GAS) #64000-18
- RELOCKING RING #64000-9
- LINK BARS W/ BUSHING #64000-1

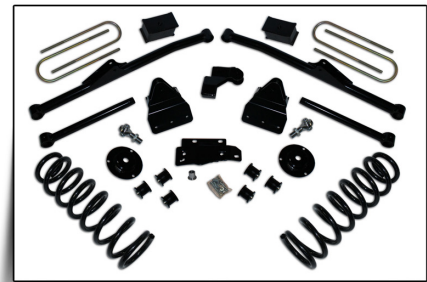

10" DODGE 2500/3500 GAS LONG ARM COMPLETE KIT #66010

- MAIN BOX KIT #66010-1
- COIL SPRINGS (GAS) #66010-2
- FRONT / REAR BRAKE LINES #66010-3
- REAR BLOCK KIT #66010-4
- TRACTION BAR #66010-5
- CV FRONT DRIVE LINE #66010-6

10" DODGE 2500/3500 DIESEL LONG ARM COMPLETE KIT #66020

- MAIN BOX KIT #66020-1
- COIL SPRINGS (GAS) #66020-2
- FRONT / REAR BRAKE LINES #66020-3
- REAR BLOCK KIT #66020-4
- TRACTION BAR #66020-5
- CV FRONT DRIVE LINE #66020-6

15" DODGE 2500/3500 GAS LONG ARM COMPLETE KIT #67010

- MAIN BOX KIT #67010-1
- FRONT / REAR BRAKE LINES #67010-2
- RELOCKING RING #67010-3
- REAR BLOCK KIT #67010-4
- CV FRONT DRIVE LINE #67010-5
- CROSS OVER STEERING KNUCKLE #67010-6
- TRACK BAR KIT #67010-7
- UPPER TRAILING ARMS #67010-8
- LOWER TRAILING ARMS #67010-9
- REAR SPRINGS #67010-10
- REAR DRIVE LINE SPACER #67010-11
- FTS 2.5 COIL OVERS #67010-12
- COIL SPRINGS #67010-13

15" DODGE 2500/3500 DIESEL LONG ARM COMPLETE KIT #67020

- MAIN BOX KIT #67010-1
- FRONT / REAR BRAKE LINES #67010-2
- RELOCKING RING #67010-3
- REAR BLOCK KIT #67010-4
- CV FRONT DRIVE LINE #67010-5
- CROSS OVER STEERING KNUCKLE #67010-6
- TRACK BAR KIT #67010-7
- UPPER TRAILING ARMS #67010-8
- LOWER TRAILING ARMS #67010-9
- REAR SPRINGS #67010-10
- REAR DRIVE LINE SPACER #67010-11
- FTS 2.5 COIL OVERS #67010-12
- COIL SPRINGS #67010-14



6" 2003 - 2009 DODGE 2500 3500



2003-2007 DODGE 2500/3500 4WD

3.5" DODGE 2500/3500 GAS COMPLETE KIT	#61031
MAIN BOX KIT	#61032-1
COIL SPRINGS (GAS)	#61032-2
SHOCKS	#61032-4

2008-2009 DODGE 2500/3500 4WD

3.5" DODGE 2500/3500 GAS COMPLETE KIT	#61041
MAIN BOX KIT	#61041-1
COIL SPRINGS (GAS)	#61032-2
SHOCKS	#61032-4

3.5" DODGE 2500/3500 DIESEL COMPLETE KIT	#61032
MAIN BOX KIT	#61032-1
COIL SPRINGS (DIESEL)	#61032-2
SHOCKS	#61032-4

3.5" DODGE 2500/3500 DIESEL COMPLETE KIT	#61042
MAIN BOX KIT	#61042-1
COIL SPRINGS (DIESEL)	#61032-2
SHOCKS	#61032-4

2003-2007 DODGE 2500/3500 4WD

6" DODGE 2500/3500 GAS COMPLETE KIT	#61021
MAIN BOX KIT	#61022-1
COIL SPRINGS (GAS)	#61022-2
SHOCKS	#61022-4

2008-2009 DODGE 2500/3500 4WD

6" DODGE 2500/3500 GAS COMPLETE KIT	#61011
MAIN BOX KIT	#61011-1
COIL SPRINGS (GAS)	#61022-2
SHOCKS	#61022-4

6" DODGE 2500/3500 DIESEL COMPLETE KIT	#61022
MAIN BOX KIT	#61022-1
COIL SPRINGS (DIESEL)	#61022-2
SHOCKS	#61022-4

6" DODGE 2500/3500 DIESEL COMPLETE KIT	#61012
MAIN BOX KIT	#61012-1
COIL SPRINGS (DIESEL)	#61022-2
SHOCKS	#61022-4

10" 2003 - 2009 DODGE 4WD 2500 3500

2003-2007 10" DODGE 4WD 2500/3500 GAS AUTOMATIC

10" GAS 2500/3500 4WD BASIC KIT	#64101
COMPONENT BOX 1	#64101-1
53" LOWER TRAILING ARMS	#64101-2
10" GAS FRONT COILS	#64101-3
8" REAR BLOCK KIT	#64101-6
DOUBLE CV FRONT DRIVE LINE KIT W/ AXLE FLANGE	#64101-9
FRONT AND REAR STEEL BRAIDED BRAKE LINES	#64101-10

2003-2007 10" DODGE 4WD 2500/3500 DIESEL AUTOMATIC TRANSMISSION

10" DIESEL 2500/3500 4WD BASIC KIT	#64103
COMPONENT BOX 1	#64101-1
56" LOWER TRAILING ARMS	#64101-2
10" DIESEL FRONT COILS	#64101-4
8" REAR BLOCK KIT	#64101-6
DOUBLE CV FRONT DRIVE LINE W/ AXLE FLANGE	#64101-9
FRONT AND REAR STEEL BRAIDED BRAKE LINES	#64101-10

2003-2007 10" DODGE 4WD 2500/3500 DIESEL STANDARD TRANSMISSION

10" DIESEL 2500/3500 4WD BASIC KIT	#64104
COMPONENT BOX 1	#64101-1
56" LOWER TRAILING ARMS	#64101-5
10" DIESEL FRONT COILS	#64101-4
8" REAR BLOCK KIT	#64101-6
DOUBLE CV FRONT DRIVE LINE W/ AXLE FLANGE	#64101-8
FRONT AND REAR STEEL BRAIDED BRAKE LINES	#64101-10

ACCESSORIES

TRACTION BARS (CREW CAB SHORT BED)	#64616
TRACTION (CREW LONG SHORT BED)	#64617
TRACTION (MEGA CAB SHORT BED)	#64618
STEEL BRAIDED BRAKE LINES	#64101-10

DOUBLE FRONT SHOCK UP GRADE

DOUBLE FRONT SHOCK BRACKETS	#64630
FTS 11" 2.0 EMULSION STEM / LOOP (BRUSHED)	#B2011-625ES
FTS 11" 2.0 EMULSION STEM / LOOP (CHROME)	#C2011-625ES
FTS 14" 2.0 R/R (BRUSHED)	#B2011-625R
FTS 14" 2.0 R/R (CHROME)	#C2011-625R

2008-2009 10" DODGE 4WD 2500/3500 GAS AUTOMATIC

10" GAS 2500/3500 4WD BASIC KIT	#64111
COMPONENT BOX 1	#64101-7
53" LOWER TRAILING ARMS	#64101-2
10" GAS FRONT COILS	#64101-3
8" REAR BLOCK KIT	#64101-6
DOUBLE CV FRONT DRIVE LINE KIT W/ AXLE FLANGE	#64101-9
FRONT AND REAR STEEL BRAIDED BRAKE LINES	#64101-10

2008-2009 10" DODGE 4WD 2500/3500 DIESEL AUTOMATIC TRANSMISSION

10" DIESEL 2500/3500 4WD BASIC KIT	#64113
COMPONENT BOX 1	#64101-7
56" LOWER TRAILING ARMS	#64101-2
10" DIESEL FRONT COILS	#64101-4
8" REAR BLOCK KIT	#64101-6
DOUBLE CV FRONT DRIVE LINE W/ AXLE FLANGE	#64101-9
FRONT AND REAR STEEL BRAIDED BRAKE LINES	#64101-10

2008-2009 10" DODGE 4WD 2500/3500 DIESEL STANDARD TRANSMISSION


10" DIESEL 2500/3500 4WD BASIC KIT	#64114
COMPONENT BOX 1	#64101-7
56" LOWER TRAILING ARMS	#64101-5
10" DIESEL FRONT COILS	#64101-4
8" REAR BLOCK KIT	#64101-6
DOUBLE CV FRONT DRIVE LINE W/ AXLE FLANGE	#64101-8
FRONT AND REAR STEEL BRAIDED BRAKE LINES	#64101-10

SINGLE REAR SHOCK UP GRADE

FTS 14" 2.0 R/R (BRUSHED)	#B2014-625R
FTS 14" 2.0 R/R (CHROME)	#C2014-625R

DOUBLE REAR SHOCK UP GRADE

FTS 10" 2.0 R/R (BRUSHED)	#B2010-625R
FTS 10" 2.0 R/R (CHROME)	#C2010-625R

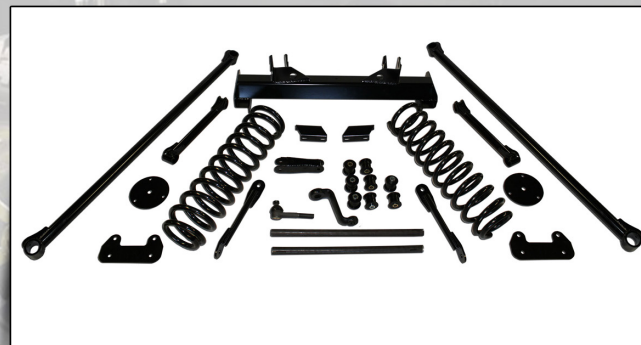

10" AND 14" 1994-2001 DODGE 4WD 2500 3500

1994-1999 10" DODGE 4WD 1500

10" GAS 1500 4WD BASIC KIT	#69001
COMPONENT BOX 1	#69001-1
COMPONENT BOX 2	#69001-2
COIL SPRINGS (GAS)	#69001-3
10" REAR LEAF SPRINGS (PAIR)	#69045
CV FRONT DRIVE LINE	#69090
FRONT AND REAR STEEL BRAIDED BRAKE LINES	#69022
SHOCKS	#69001-4

1994-1999 10" DODGE 4WD 2500/3500

10" GAS 2500/3500 4WD BASIC KIT	#70001
COMPONENT BOX 1	#70001-1
COMPONENT BOX 2	#70001-2
COIL SPRINGS (GAS)	#70001-3
10" REAR LEAF SPRINGS (PAIR)	#70045
CV FRONT DRIVE LINE	#70090
FRONT AND REAR STEEL BRAIDED BRAKE LINES	#70022
SHOCKS	#70001-4



1994-1999 10" DODGE 4WD 2500/3500

10" DIESEL 2500/3500 4WD BASIC KIT	#70003
COMPONENT BOX 1	#70001-1
COMPONENT BOX 2	#70001-2
COIL SPRINGS (DIESEL)	#70001-6
10" REAR LEAF SPRINGS (PAIR)	#70045
CV FRONT DRIVE LINE	#70090
FRONT AND REAR STEEL BRAIDED BRAKE LINES	#70022
SHOCKS	#70001-4

1994-1999 14" DODGE 4WD 1500

14" GAS 1500 4WD BASIC KIT	#69101
COMPONENT BOX 1	#69101-1
COMPONENT BOX 2	#69101-2
COIL SPRINGS (GAS)	#69101-3
14" REAR LEAF SPRINGS (PAIR)	#69145
CV FRONT DRIVE LINE	#69190
FRONT AND REAR STEEL BRAIDED BRAKE LINES	#69122
SHOCKS	#69101-4

2000-2001 10" DODGE 4WD 1500

10" GAS 1500 4WD BASIC KIT	#69002
COMPONENT BOX 1	#69002-1
COMPONENT BOX 2	#69002-2
COIL SPRINGS (GAS)	#69001-3
10" REAR LEAF SPRINGS (PAIR)	#69045
CV FRONT DRIVE LINE	#69090
FRONT AND REAR STEEL BRAIDED BRAKE LINES	#69022
SHOCKS	#69001-4



2000-2001 10" DODGE 4WD 2500/3500

10" GAS 2500/3500 4WD BASIC KIT	#70002
COMPONENT BOX 1	#70002-1
COMPONENT BOX 2	#70002-2
COIL SPRINGS (GAS)	#70001-3
10" REAR LEAF SPRINGS (PAIR)	#70045
CV FRONT DRIVE LINE	#70090
FRONT AND REAR STEEL BRAIDED BRAKE LINES	#70022
SHOCKS	#70001-4

2000-2001 10" DODGE 4WD 2500/3500

10" DIESEL 2500/3500 4WD BASIC KIT	#70004
COMPONENT BOX 1	#70002-1
COMPONENT BOX 2	#70002-2
COIL SPRINGS (DIESEL)	#70001-6
10" REAR LEAF SPRINGS (PAIR)	#70045
CV FRONT DRIVE LINE	#70090
FRONT AND REAR STEEL BRAIDED BRAKE LINES	#70022
SHOCKS	#70001-4

2000-2001 14" DODGE 4WD 1500

14" GAS 1500 4WD BASIC KIT	#69102
COMPONENT BOX 1	#69102-1
COMPONENT BOX 2	#69102-2
COIL SPRINGS (GAS)	#69101-3
14" REAR LEAF SPRINGS (PAIR)	#69145
CV FRONT DRIVE LINE	#69190
FRONT AND REAR STEEL BRAIDED BRAKE LINES	#69122
SHOCKS	#69101-4





2002-2005 10" DODGE 1500 4WD IFS TRUCK KITS

10" 2002-2005 4WD IFS BASIC KITS	#61001
COMPONENT BOX 1	#61001-1
COMPONENT BOX 2	#61001-2
COMPONENT BOX 3	#61001-3
10" REAR SPRINGS	#61010
CV FRONT DRIVE SHAFT W/ FLANGE	#61070
FRONT AND REAR STEEL BRAIDED BRAKE LINES	#61088

2006-2008 10" DODGE 1500 4WD IFS TRUCK KITS

10" 2006-2008 4WD IFS BASIC KITS	#61101
COMPONENT BOX 1	#61001-1
COMPONENT BOX 2	#61001-2
COMPONENT BOX 3	#61001-3
10" REAR SPRINGS	#61010
CV FRONT DRIVE SHAFT W/ FLANGE	#61070
FRONT AND REAR STEEL BRAIDED BRAKE LINES	#61088



ACCESSORIES

REAR TRACTION BAR KIT 60"	#61046
REAR TRACTION BAR KIT 65"	#61047
REAR TRACTION BAR KIT 70"	#61048
DOUBLE REAR SHOCK BRACKET KIT	#61049
TUBULAR UPPER A ARM	#62041
REAR DRIVE LINE SPACER	#61071
FRONT AND REAR STEEL BRAIDED BRAKE LINES	#61088

SINGLE FRONT SHOCK UPGRADE

CHROME FTS 14" FTS 2.0 R/R	#C2014-625R
BRUSHED FTS 14" FTS 2.0 R/R	#B2014-625R

SINGLE REAR SHOCK UPGRADE

CHROME FTS 14" TRAVEL R/R	#C2014-625R
BRUSHED FTS 14" TRAVEL R/R	#B2014-625R

DOUBLE FRONT SHOCK UPGRADE

DOUBLE SHOCK HOOPS W/ UPPER A ARM	#61039
DOUBLE SHOCK HOOPS	#61040
TUBULAR UPPER A ARM	#61041
CHROME FTS 2.0 R/R 10" TRAVEL	#C2010-625R
BRUSHED FTS 2.0 R/R 10" TRAVEL	#B2010-625R

DOUBLE REAR SHOCK UPGRADE

CHROME FTS 10" TRAVEL R/R	#C2010-625R
BRUSHED FTS 10" TRAVEL R/R	#B2010-625R



2002-2005 12" DODGE 1500 2WD IFS TRUCK KITS

12" 2002-2005 2WD IFS BASIC KITS	#62001
COMPONENT BOX 1	#62001-1
COMPONENT BOX 2	#62001-2
COMPONENT BOX 3	#62001-3
12" REAR SPRINGS	#62010
COIL OVERS W/ BRACKETS	#62001-6
FRONT AND REAR STEEL BRAIDED BRAKE LINES	#61088

2006 12" DODGE 1500 2WD IFS TRUCK KITS

12" 2006 4WD IFS BASIC KITS	#62101
COMPONENT BOX 1	#62101-1
COMPONENT BOX 2	#62101-2
COMPONENT BOX 3	#62101-3
12" REAR SPRINGS	#62010
COIL OVERS W/ BRACKETS	#62001-6
FRONT AND REAR STEEL BRAIDED BRAKE LINES	#61088



Full Throttle Suspension Inc warrants its new products to be free from structural defects in material and workmanship for as they are owner by the original purchaser unless otherwise stated.

Full Throttle Suspension Inc. limited warranty specifically does not apply to products which have been (a) modified or altered in anyway ; (b) subject to adverse conditions such as misuse, neglect, accident, improper installation or adjustment, dirt, or other contaminants, water corrosion or faulty repair ; (c) any product used for racing ; (d) used in a manner other than what is specifically recommended in the Full Throttle Suspension catalog ; (e) any product that is not manufactured by Full Throttle Suspension Inc

There are no warranties that extend beyond those stated here. Full Throttle Suspension offers no other warranties, express or implied beyond this Limited Warranty.

In the event of an alleged defect in material or workmanship. Full Throttle Suspension Inc's responsibility is strictly to repair or replace the defective product. Full Throttle Suspension Inc has no other obligation express or implied. Final warranty determination will be at the sole discretion of Full Throttle Suspension Inc.

Full Throttle Suspension shall not be responsible for : (a) actual or alleged labor, transportation or other incidental charges; (b) actual or consequential or other damages incurred by use of any product of Full Throttle Suspension Inc.

To initiate the warranty process:

Returns and exchanges will be accepted with a a " Returns Good Authorization " from Full Throttle Suspension Inc R.G.A numbers are only valid for 30 days from the date issued. Write this number on the outside of your return package and tag the goods inside with your name and R.G.A number. A R.G.A. does NOT guarantee replacement or refund, but only that we will inspect the merchandise based upon your claim. Non-defective items must be returned in new, resalable condition , in original packaging and are subject to a 40% restocking fee.

This Limited Warranty sets forth legal rights. The consumer may have other rights as results in variations in state and providence laws. This Limited Warranty supersedes all prior warranty statements.

Inquires concerning this warranty should be directed to:

Full Throttle Suspension Inc.
Warranty Return Department
3551 W. Ashlan Avenue
Fresno , CA 93722

Materials and Specifications :

Materials, design and specifications are subject to change without notice. All merchandise information presented in this guide was true and correct at the time of publication. We consistently update our products and merchandise to offer our customers the highest quality parts and accessories available.



online . FullThrottleSuspension.com

phone. 559.271.8685